User Manual

S Line Touch Panel

Part Number:	80860.726
Version:	5
Date:	2013-10-29
Valid for:	TP11AM TP11AT TP21AM TP21AS TP21AT TP35AT TP43AT TP57AM TP57AT TP070ATW TP090ATW TP104AT TP105AT TP120AT TP151AT

Version	Date	Modifications
1	2008-06-04	First Edition
2	2009-03-10	Added TP57AM and TP57AT
3	2010-11-25	Added TP35AT, TP43AT, TP105AT and KNX Interface
4	2012-07-17	Interfaces: RS422/RS485 modified Technical data: Application area modified Connecting the device: Torque specifications added
5	2013-10-29	TP90AT becomes TP090ATW and TP70AT becomes TP070ATW

This manual, including all illustrations contained herein, is copyright protected. Use of this manual by any third party in departure from the copyright provision is forbidden. No part of this manual may be reproduced, translated or electronically or photographically archived or altered without the express written consent from Sütron electronic GmbH. Violations shall be cause for damage liability.
Sütron electronic reserves the right to make any changes that contribute to technical improvement.

Overall Table of Contents

1 Important Notes 7
1.1 Symbols 7
1.2 Safety Notes 7
1.3 Intended Use 8
1.4 Target Group 8

2 Installation and Commissioning 9
2.1 Unpacking the Device 9
2.2 Mounting the Device 9
2.2.1 Front Panel Dimensions 10
2.2.1.1 TP11AM, TP11AT 10
2.2.1.2 TP21AM, TP21AS, TP21AT 10
2.2.1.3 TP35AM, TP35AT 11
2.2.1.4 TP43AT 11
2.2.1.5 TP57AM, TP57AT 12
2.2.1.6 TP070ATW 13
2.2.1.7 TP090ATW 14
2.2.1.8 TP104AT 15
2.2.1.9 TP105AT 16
2.2.1.10 TP120AT 17
2.2.1.11 TP151AT 18
2.2.2 Mounting Cutout 19
2.2.2.1 TP11AM, TP11AT 19
2.2.2.2 TP21AM, TP21AS, TP21AT 20
2.2.2.3 TP35AM, TP35AT 21
2.2.2.4 TP43AT 22
2.2.2.5 TP57AM, TP57AT 23
2.2.2.6 TP070ATW 24
2.2.2.7 TP090ATW 25
2.2.2.8 TP104AT 26
2.2.2.9 TP105AT 27
2.2.2.10 TP120AT 28
2.2.2.11 TP151AT 29
2.2.3 Side View, Mounting Depth 30
2.2.3.1 TP11AM, TP11AT 30
2.2.3.2 TP21AM, TP21AS, TP21AT 31
2.2.3.3 TP35AM, TP35AT 32
2.2.3.4 TP43AT 33
2.2.3.5 TP57AM, TP57AT 34
2.2.3.6 TP070ATW 35
2.2.3.7 TP090ATW 36
2.2.3.8 TP104AT 37
2.2.3.9 TP105AT 38
2.2.3.10 TP120AT 39
2.2.3.11 TP151AT 40
2.3 Connecting the Device 41
2.3.1 Supply Voltage 41

2.3.2 Grounding ... 42
2.4 Switching On ... 43
2.4.1 Loading Procedure on Windows CE Operating System ... 43
2.4.1.1 Launch Structure ... 44
2.4.1.2 Normal Mode ... 45
2.4.1.3 Setup Main Mode ... 45
2.4.1.4 Administration Operating Mode ... 54
2.5 Identification ... 56
2.5.1 Version Key ... 56

3 Control and Display Elements ... 57
3.1 Display ... 57
3.1.1 Touch Screen ... 57

4 Interfaces of the Device ... 59
4.1 Standard Interfaces ... 60
4.1.1 Ethernet (X5) ... 60
4.1.1.1 Pin Assignment ... 60
4.1.1.2 Cable ... 60
4.1.1.3 Diagnostics ... 61
4.1.2 USB (X9, X10) ... 61
4.1.2.1 Cable ... 61
4.2 Serial Interfaces ... 62
4.2.1 RS422 / RS485 (X6) ... 63
4.2.1.1 Pin Assignment ... 63
4.2.1.2 Termination ... 64
4.2.2 RS232 (X6) ... 65
4.2.2.1 Pin Assignment ... 65
4.2.2.2 Termination ... 65
4.3 Field Bus Interfaces ... 66
4.3.1 CAN Slave (X6) ... 66
4.3.1.1 Pin Assignment ... 67
4.3.1.2 Cable ... 68
4.3.1.3 Termination ... 68
4.3.1.4 Diagnostics ... 69
4.3.1.5 Slope Control ... 69
4.3.2 DeviceNet Slave (X6) ... 70
4.3.2.1 Pin Assignment ... 70
4.3.2.2 Cable ... 71
4.3.2.3 Termination ... 71
4.3.2.4 Diagnostics ... 71
4.3.3 INTERBUS Slave (X6, X7) ... 72
4.3.3.1 Pin Assignment ... 72
4.3.3.2 Cable ... 73
4.3.3.3 Diagnostics ... 73
4.3.4 MPI Slave (X6) ... 74
4.3.4.1 Pin Assignment ... 74
4.3.4.2 Cable ... 75

4.3.4.3 Termination ... 75
4.3.4.4 Diagnostics ... 75
4.3.5 PROFIBUS-DP Slave (X6) ... 76
4.3.5.1 Pin Assignment ... 76
4.3.5.2 Cable ... 77
4.3.5.3 Termination ... 77
4.3.5.4 Diagnostics ... 77
4.3.6 KNX (X6) ... 78
4.3.6.1 Pin Assignment ... 78
4.4 Shielding D-SUB Connectors ... 79

5 Maintenance and Servicing ... 81
5.1 Front Panel ... 81
5.2 Fuse ... 81
5.3 Battery ... 81
5.3.1 Changing the Battery ... 82
5.3.2 Battery Disposal ... 82

6 Technical Data ... 83
6.1 General ... 83
6.2 TP11AM ... 86
6.3 TP11AT ... 87
6.4 TP21AM ... 88
6.5 TP21AS ... 89
6.6 TP21AT ... 90
6.7 TP35AM ... 91
6.8 TP35AT ... 92
6.9 TP43AT ... 93
6.10 TP57AM ... 94
6.11 TP57AT ... 95
6.12 TP070ATW ... 96
6.13 TP090ATW ... 97
6.14 TP104AT ... 99
6.15 TP105AT ... 100
6.16 TP120AT ... 101
6.17 TP151AT ... 102

7 Ordering Data ... 103

A Index ... 105

1 Important Notes

1.1 Symbols

The symbols in this manual are used to draw your attention on notes and dangers.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER
This indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING
This indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION
This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE
This symbol together with the signal word NOTE and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.

This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

1.2 Safety Notes

- Read this manual carefully before using the operating device. Keep this manual in a place where it is always accessible to all users.
- Proper transportation, handling and storage, placement and installation of this product are prerequisites for its subsequent flawless and safe operation.
- This user manual contains the most important information for the safe operation of the device.
- The user manual, in particular the safety notes, must be observed by all personnel working with the device.
- Observe the accident prevention rules and regulations that apply to the operating site.
- Installation and operation must only be carried out by qualified and trained personnel.

1.3 Intended Use

– The device is designed for use in the industry.
– The device is state-of-the art and has been built to the latest standard safety requirements. However, dangerous situations or damage to the machine itself or other property can arise from the use of this device.
– The device fulfills the requirements of the EMC directives and harmonized European standards. Any modifications to the system can influence the EMC behavior.

NOTICE: Radio Interference
This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

1.4 Target Group

The use of products described in this manual is oriented exclusively to:
– Qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.
– Qualified application programmers and software engineers, who are familiar with the safety concepts of automation technology and applicable standards.

2 Installation and Commissioning

2.1 Unpacking the Device

Unpack all parts carefully and check the contents for any visible damage in transit. Also check whether the shipment matches the specifications on your delivery note.

If you notice damages in transit or discrepancies, please contact us immediately.

2.2 Mounting the Device

NOTICE: Damage
When installing the device, leave a gap of at least 30 mm (1.181") around the device to ensure sufficient air circulation.

NOTICE: Damage
When the operating device is installed horizontally, please note that additional sources of heat beneath the operating device may result in heat accumulation. Make sure to allow sufficient heat dissipation!
Please observe the permissible temperature range specified in the technical data of the user manual when operating the device.

NOTICE: Damage
In order to ensure the degree of protection specified in the technical data, always make sure that the seal lies flat against the mounting surface and the threaded pins of the mounting brackets are tightened uniformly to a maximum torque of 1 Nm.

The device can be easily and quickly mounted from the rear of the device. A panel thickness of 1 mm to 6 mm (0.039" to 0.236") is permitted for proper mounting.

1. Insert the device in the mounting cutout from the front.

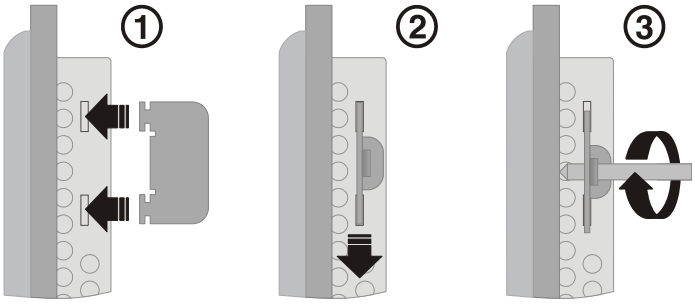

Figure 2-1 Mounting the device using a mounting bracket

2. Insert the mounting brackets into the appropriate openings (figure 1) and pull the brackets downwards until they lock in place (2).
3. Fasten the device into position using the threaded pins (3).

2.2.1 Front Panel Dimensions

2.2.1.1 TP11AM, TP11AT

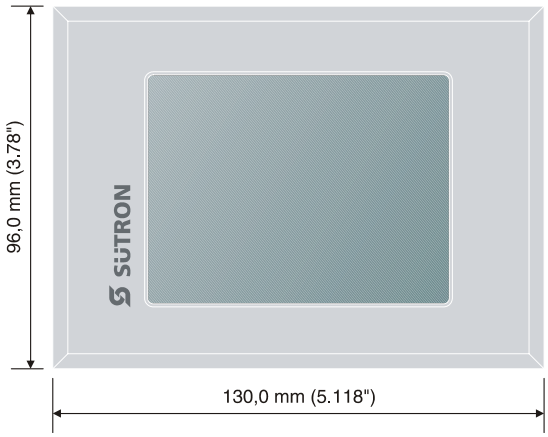

Figure 2-2 TP11AM, TP11AT

2.2.1.2 TP21AM, TP21AS, TP21AT

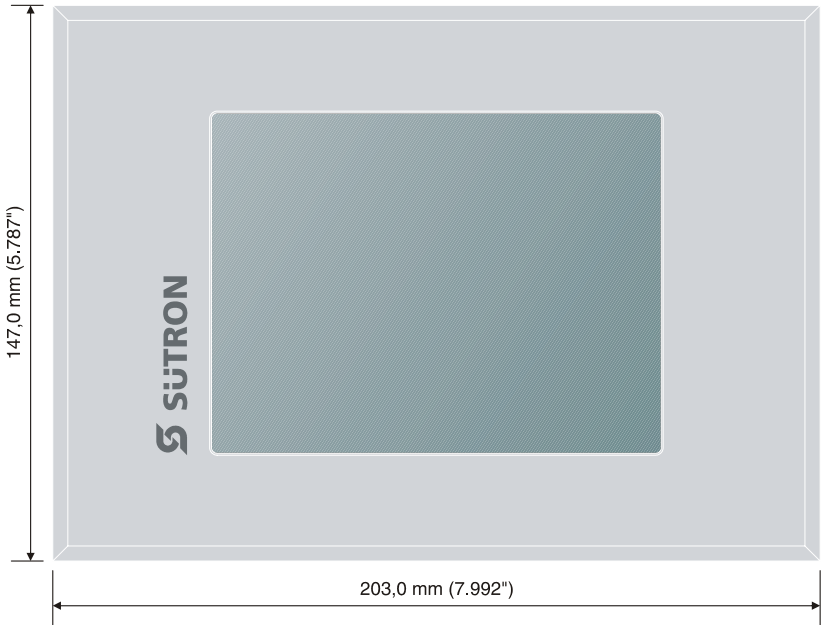

Figure 2-3 TP21AM, TP21AS, TP21AT

2.2.1.3 TP35AM, TP35AT

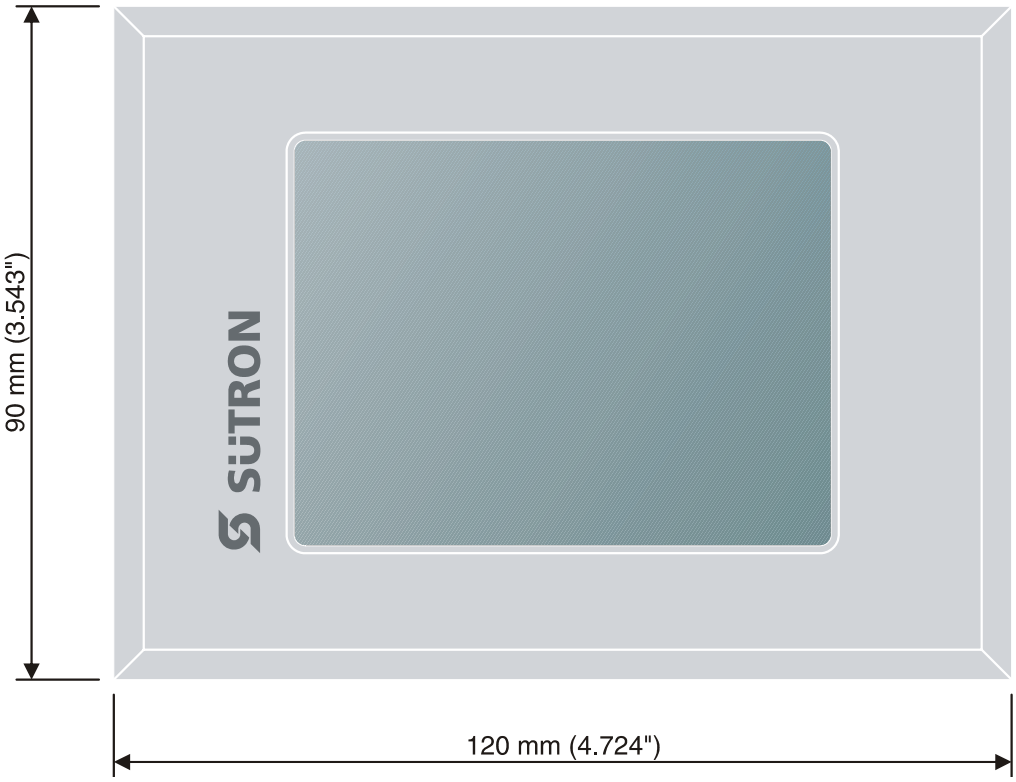

Figure 2-4 TP35AM, TP35AT

2.2.1.4 TP43AT

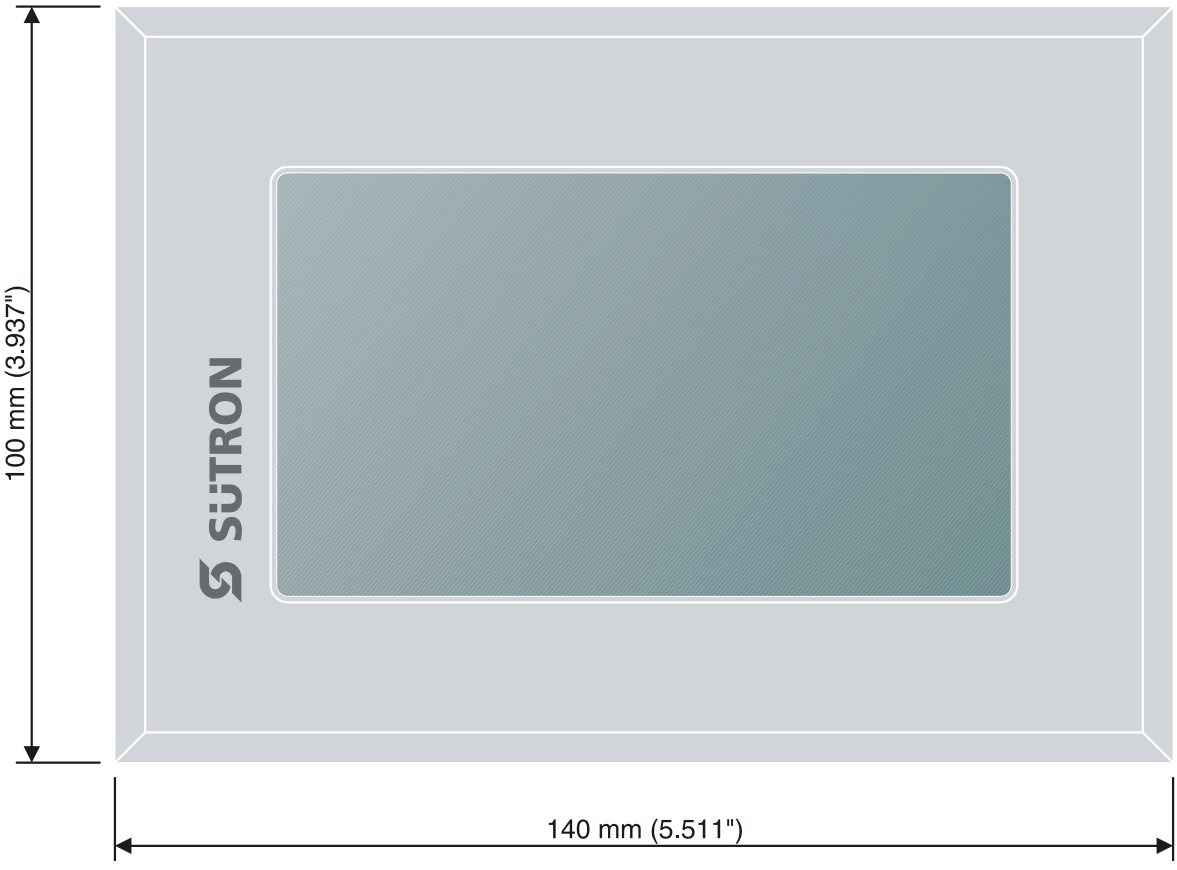

Figure 2-5 TP43AT

2.2.1.5 TP57AM, TP57AT

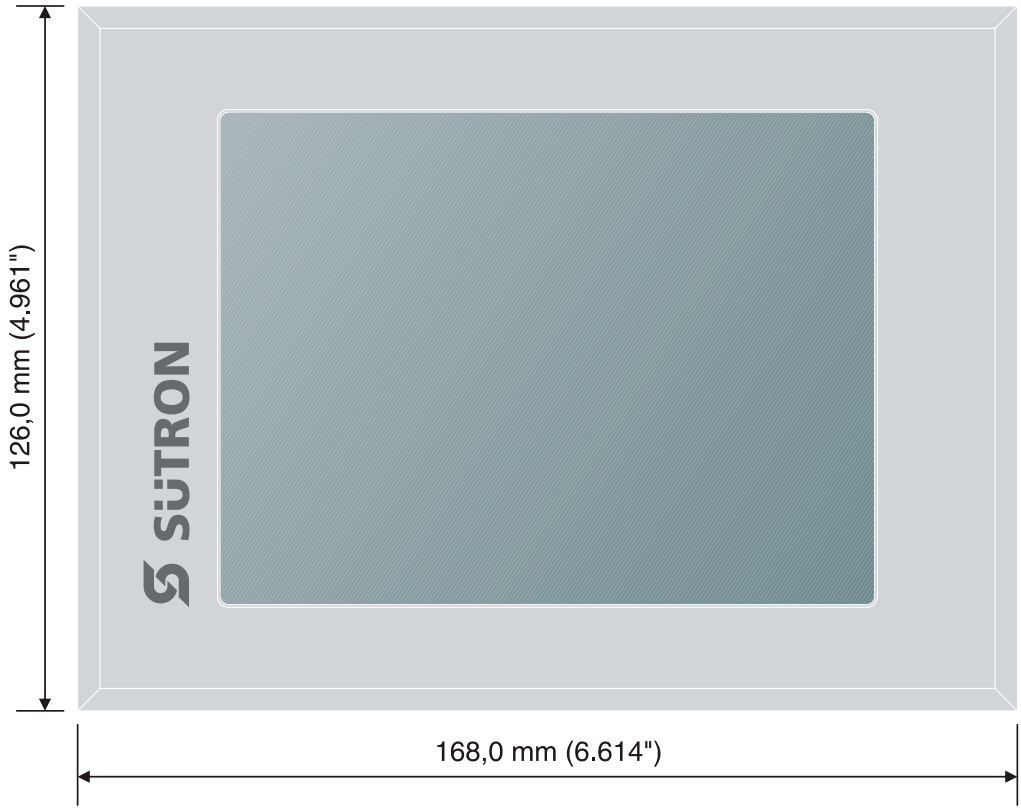

Figure 2-6 TP57AM, TP57AT

2.2.1.6 TP070ATW

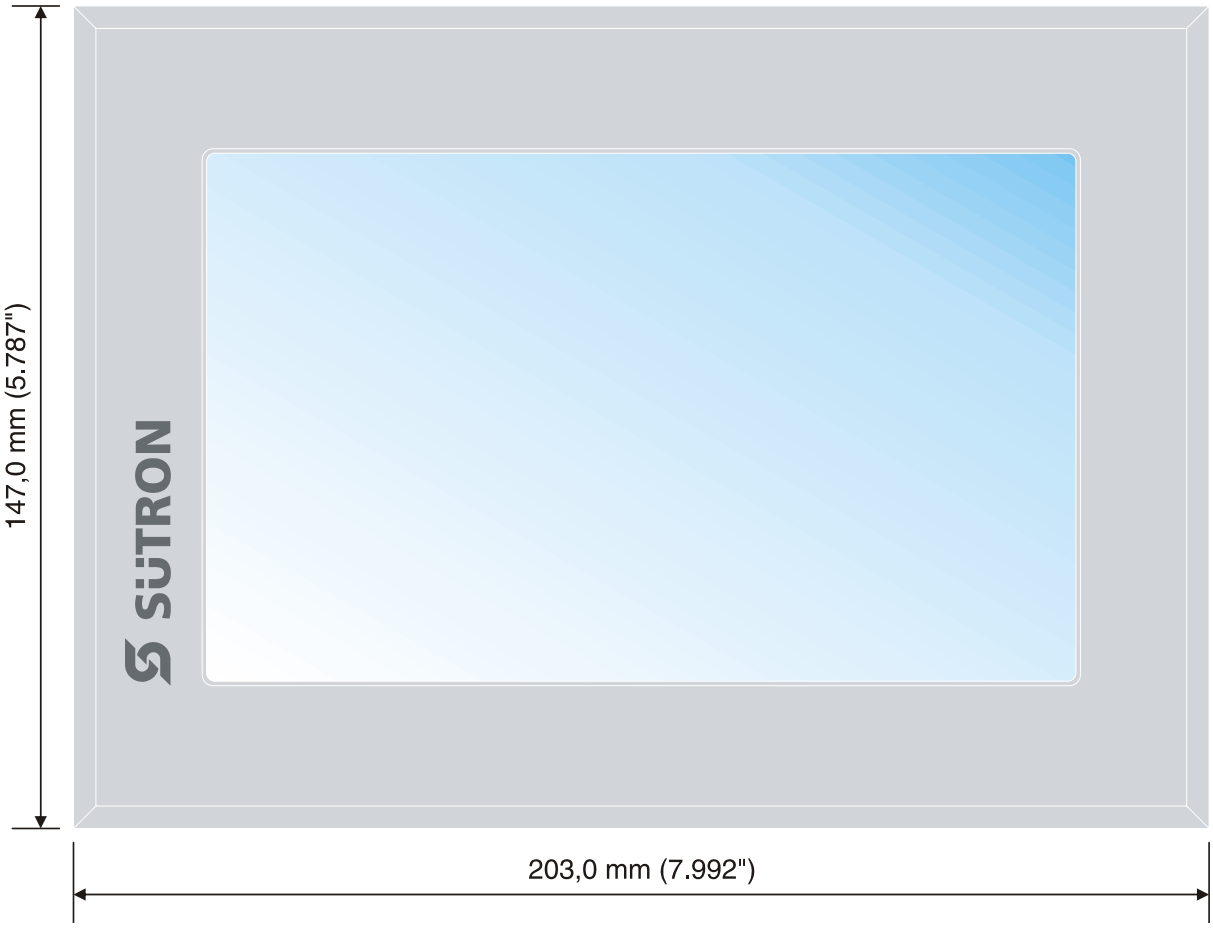

Figure 2-7 TP070ATW

2.2.1.7 TP090ATW

Figure 2-8 TP090ATW

2.2.1.8 TP104AT

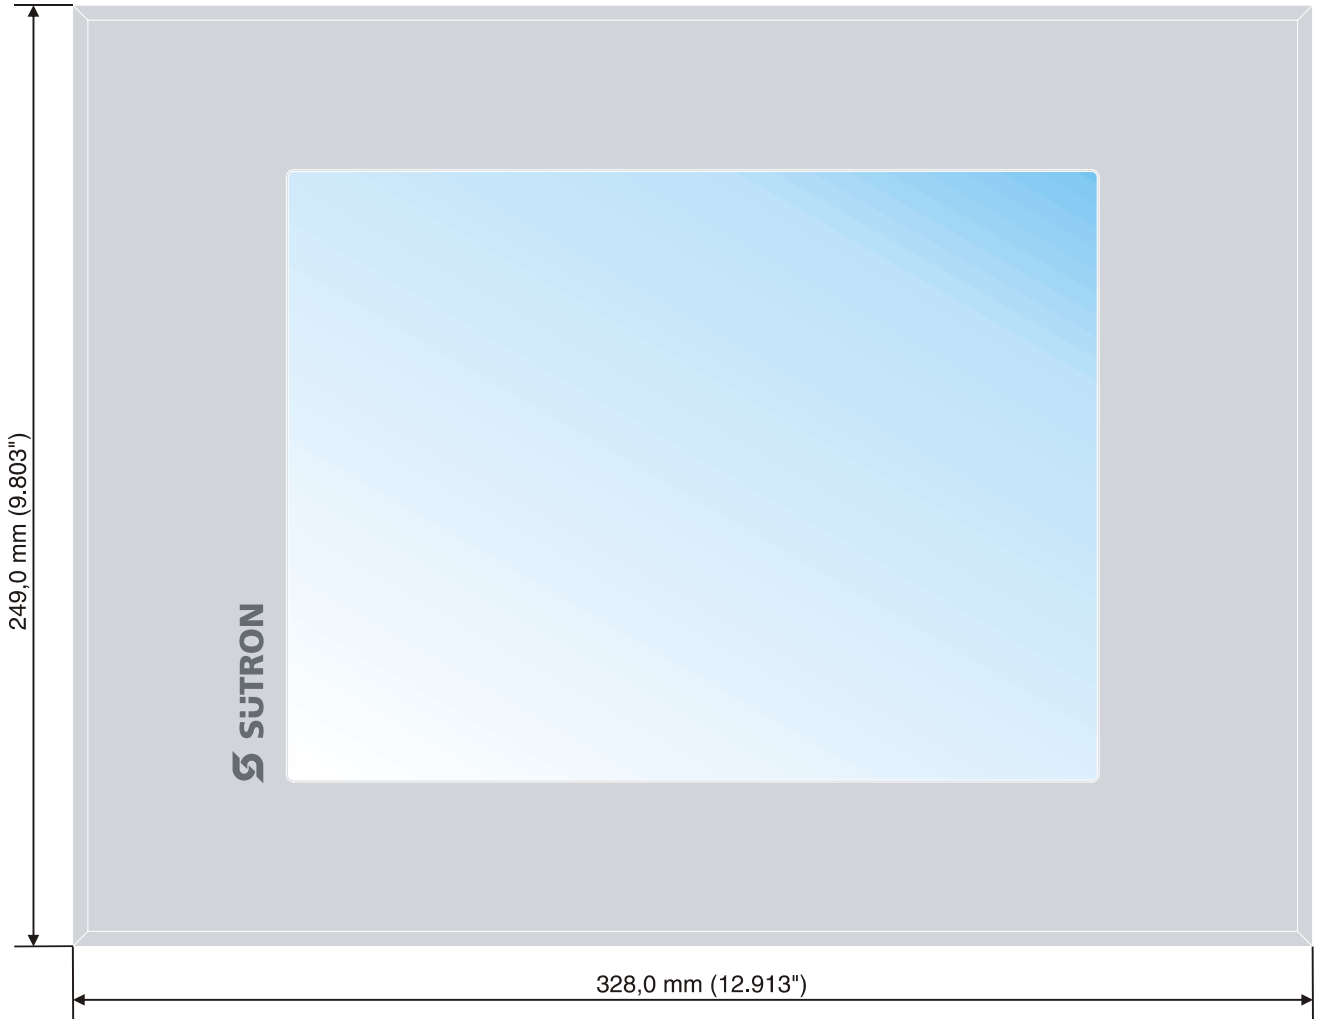

Figure 2-9 TP104AT

2.2.1.9 TP105AT

Figure 2-10 TP105AT

2.2.1.10 TP120AT

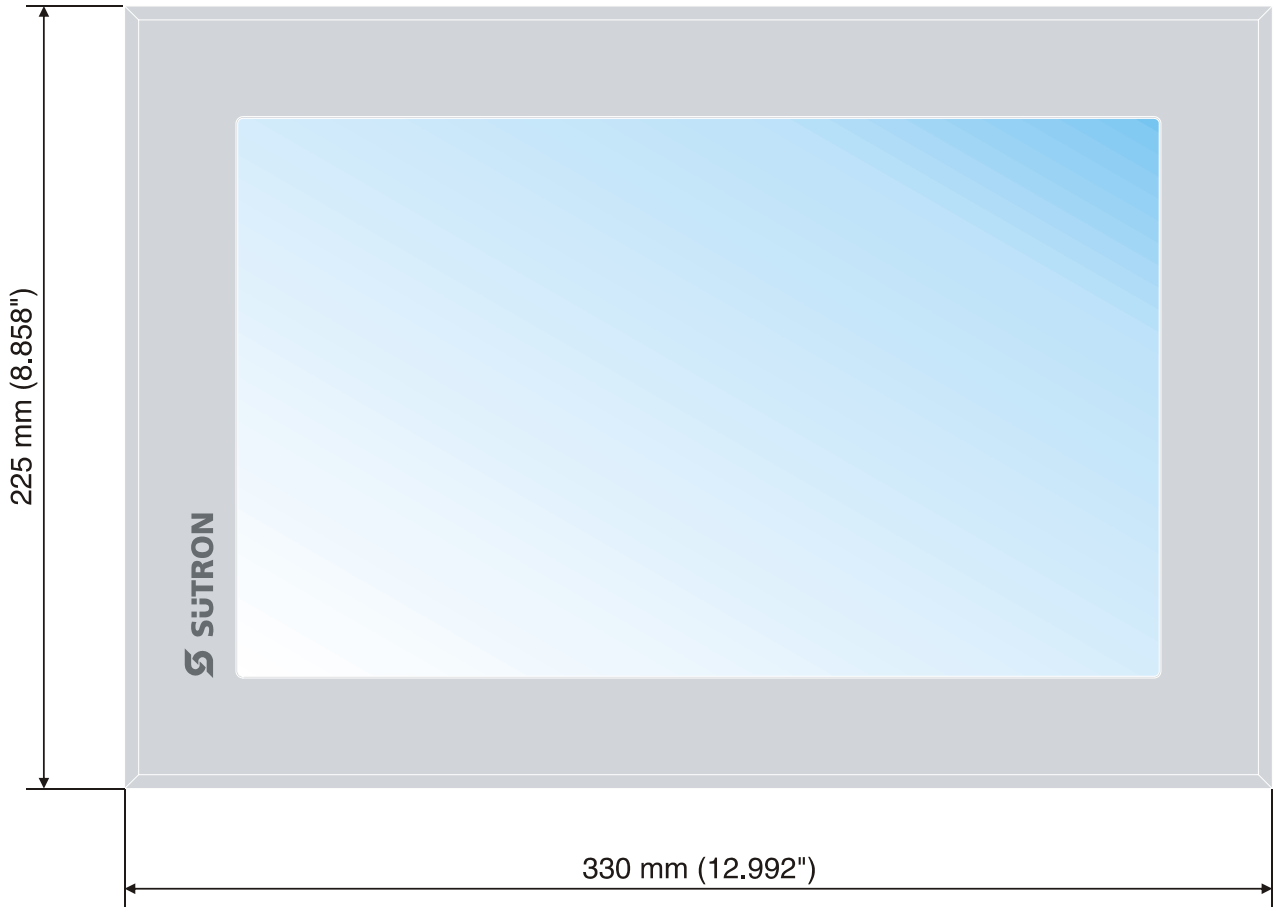

Figure 2-11 TP120AT

2.2.1.11 TP151AT

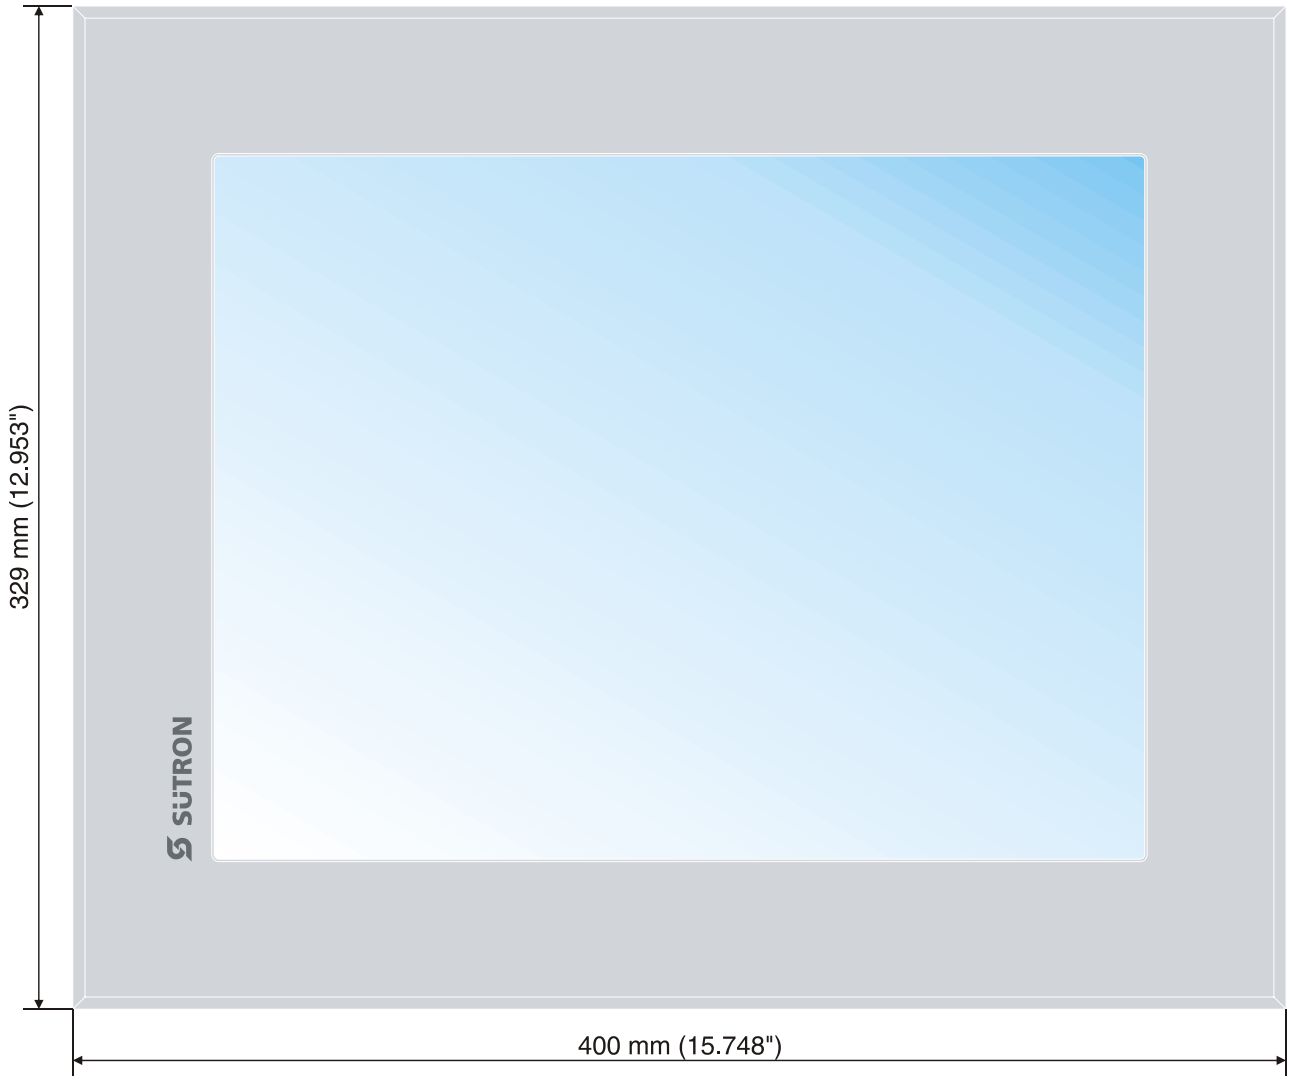

Figure 2-12 TP151AT

2.2.2 Mounting Cutout

2.2.2.1 TP11AM, TP11AT

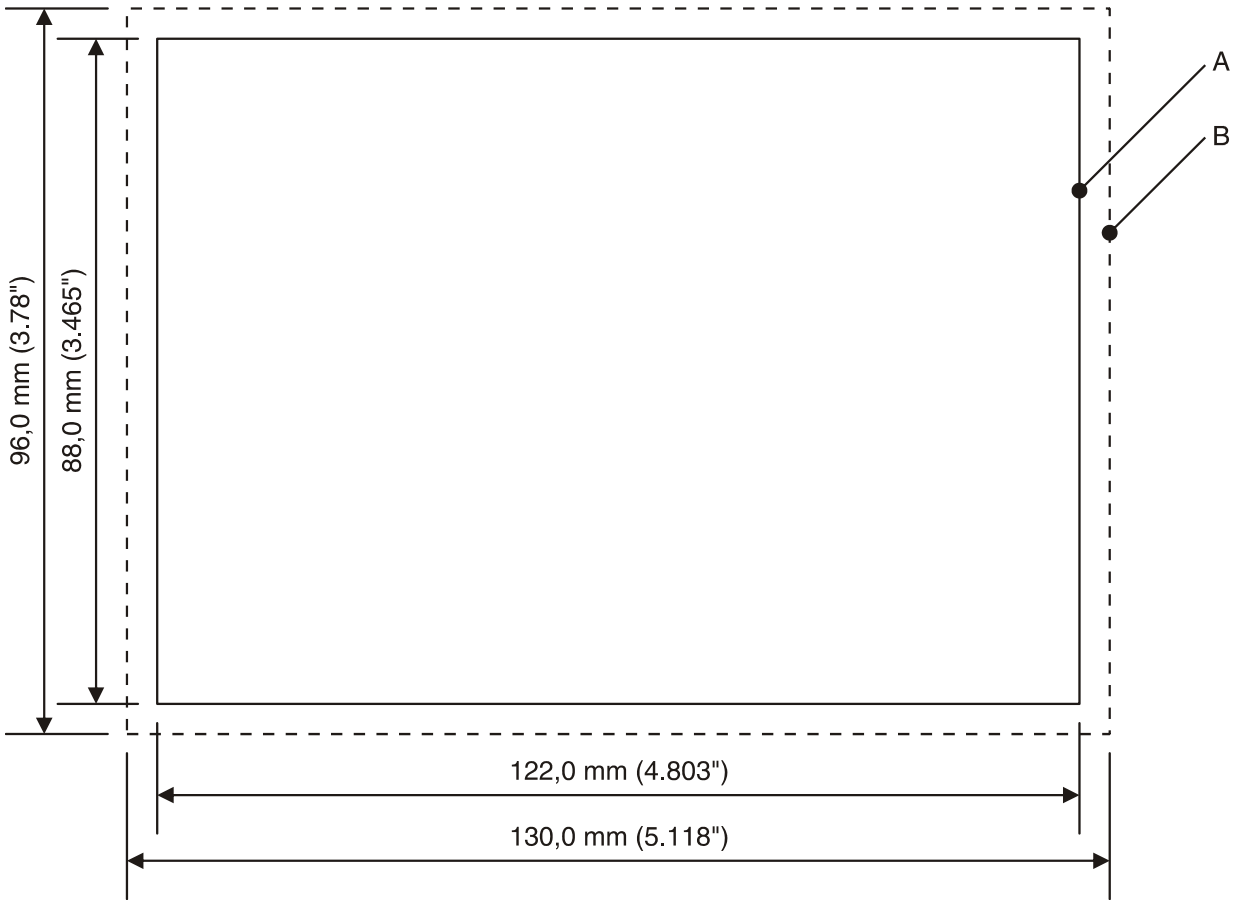

Figure 2-13 TP11AM, TP11AT

A Mounting Cutout
B Front Panel

2.2.2.2 TP21AM, TP21AS, TP21AT

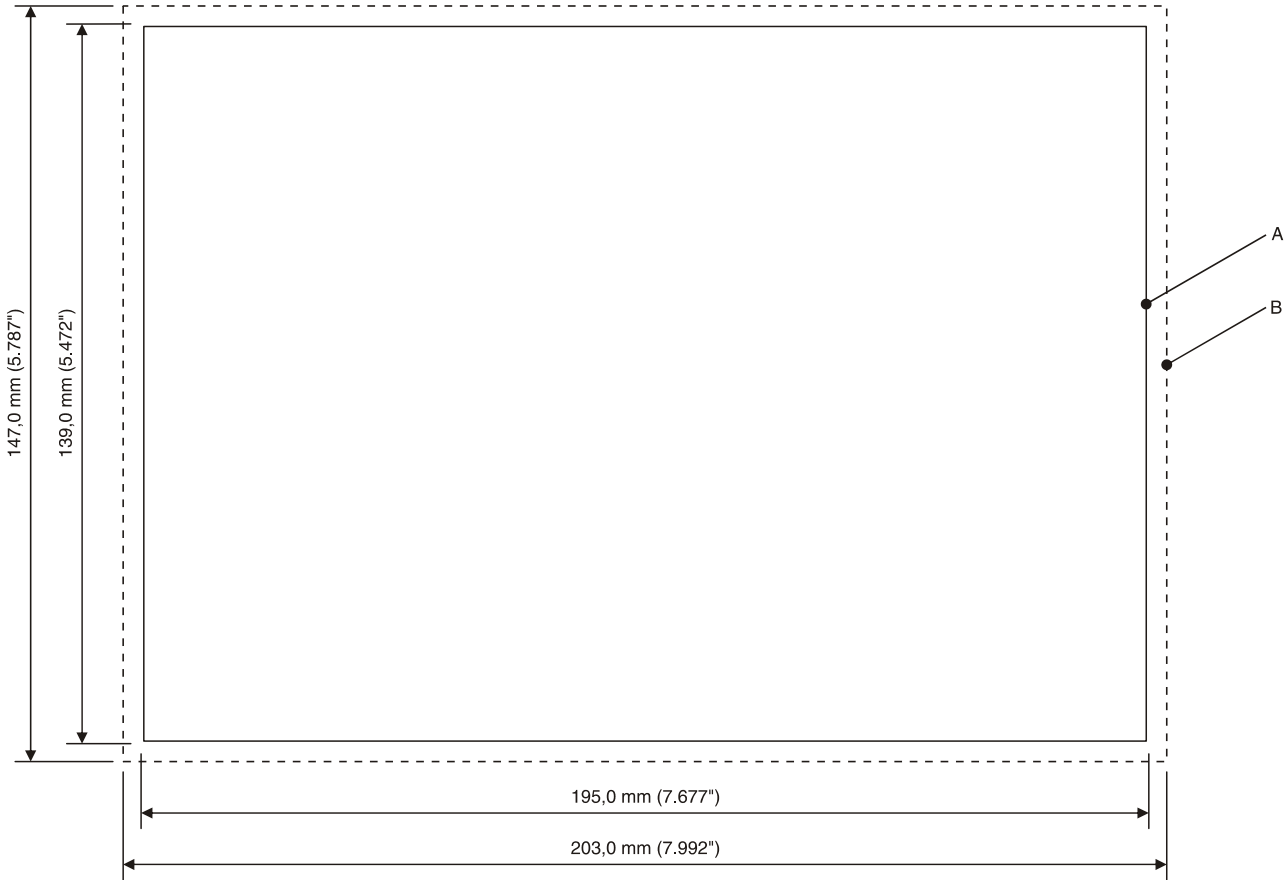

Figure 2-14 TP21AM, TP21AS, TP21AT

A Mounting Cutout
B Front Panel

2.2.2.3 TP35AM, TP35AT

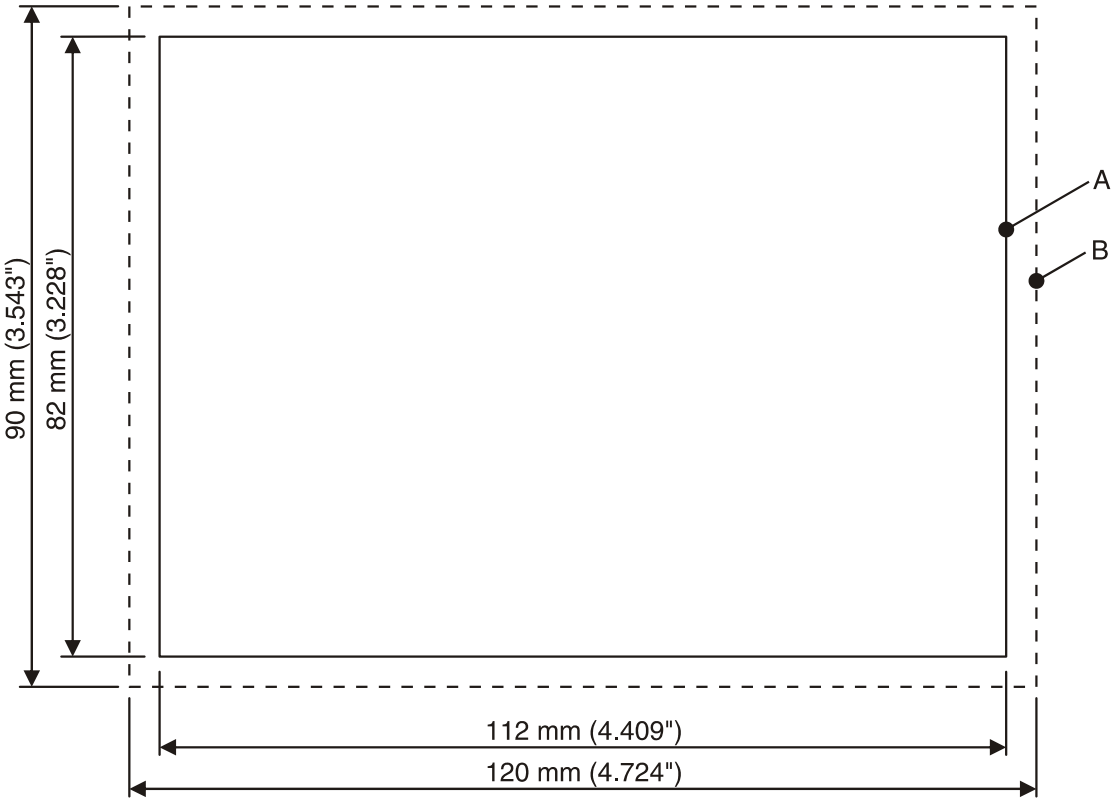

Figure 2-15 TP35AM, TP35AT

A Mounting Cutout
B Front Panel

2.2.2.4 TP43AT

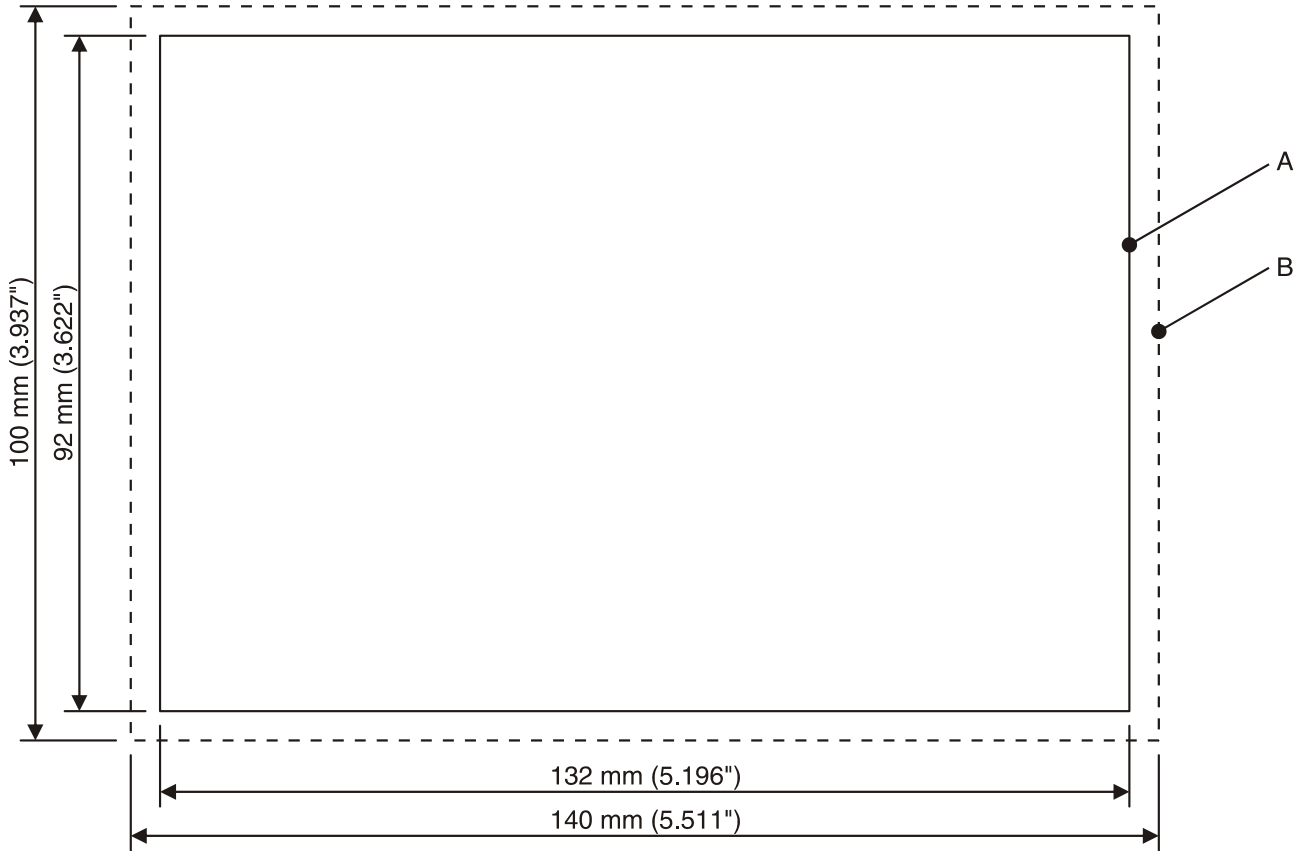

Figure 2-16 TP43AT

A Mounting Cutout
B Front Panel

2.2.2.5 TP57AM, TP57AT

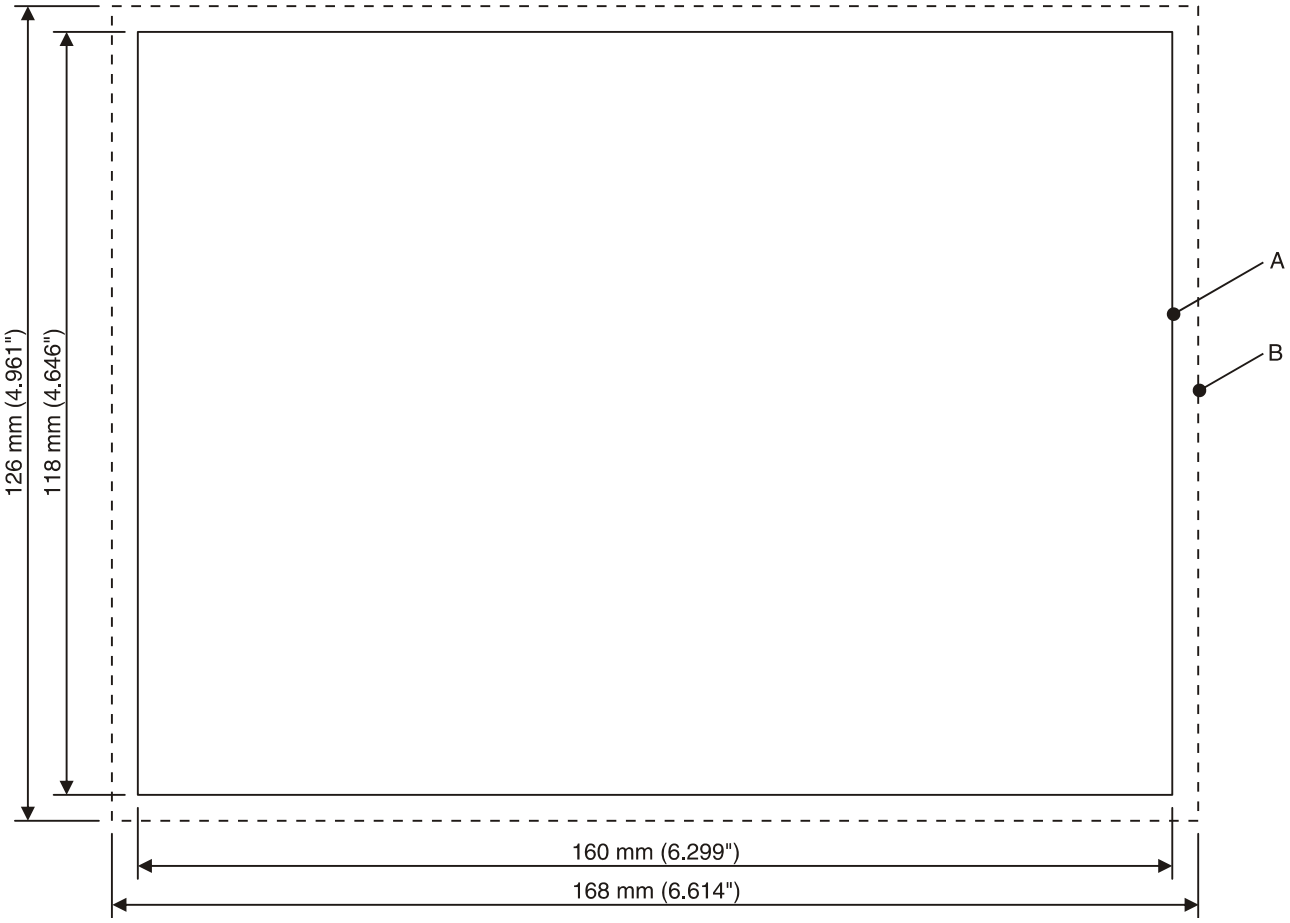

Figure 2-17 TP57AM, TP57AT

A Mounting Cutout
B Front Panel

2.2.2.6 TP070ATW

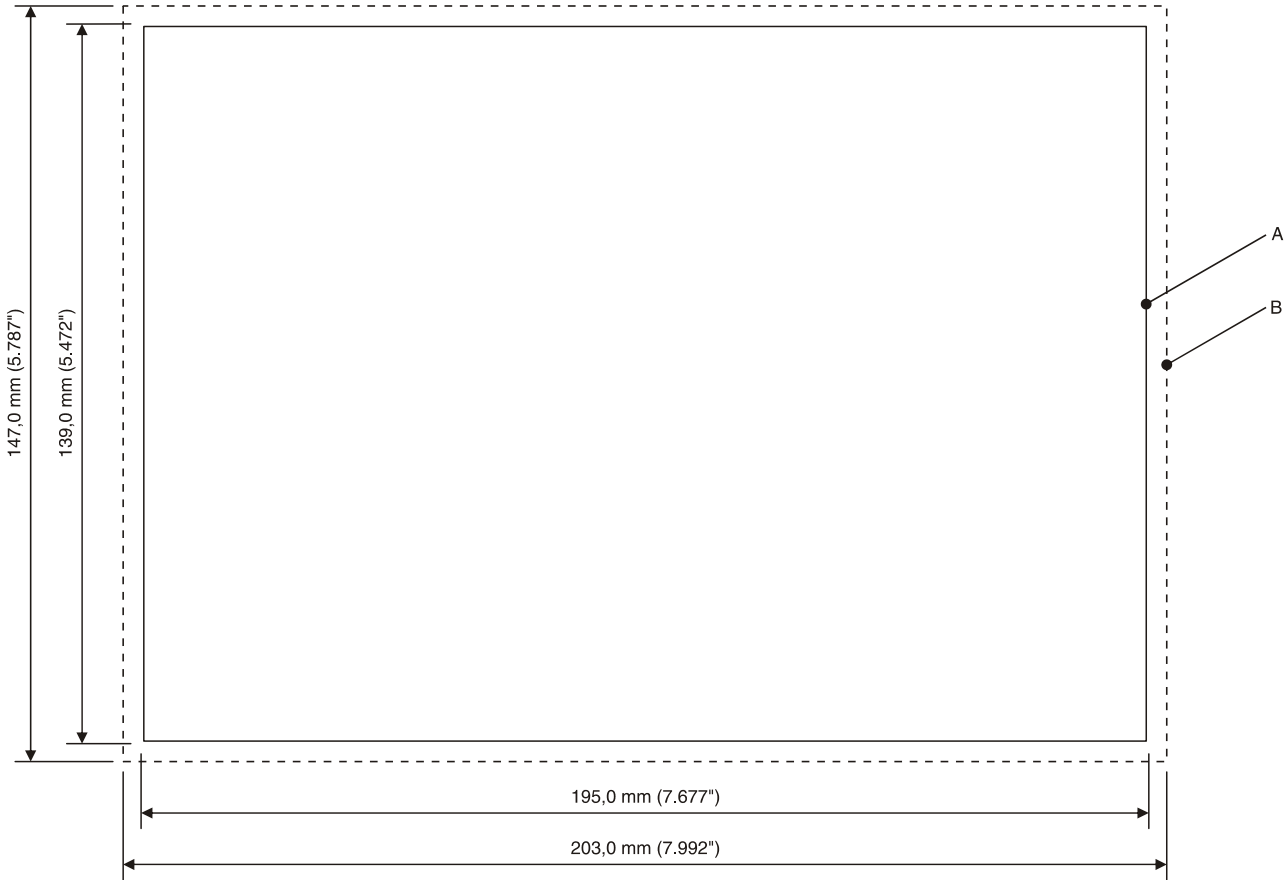

Figure 2-18 TP070ATW

A Mounting Cutout
B Front Panel

2.2.2.7 TP090ATW

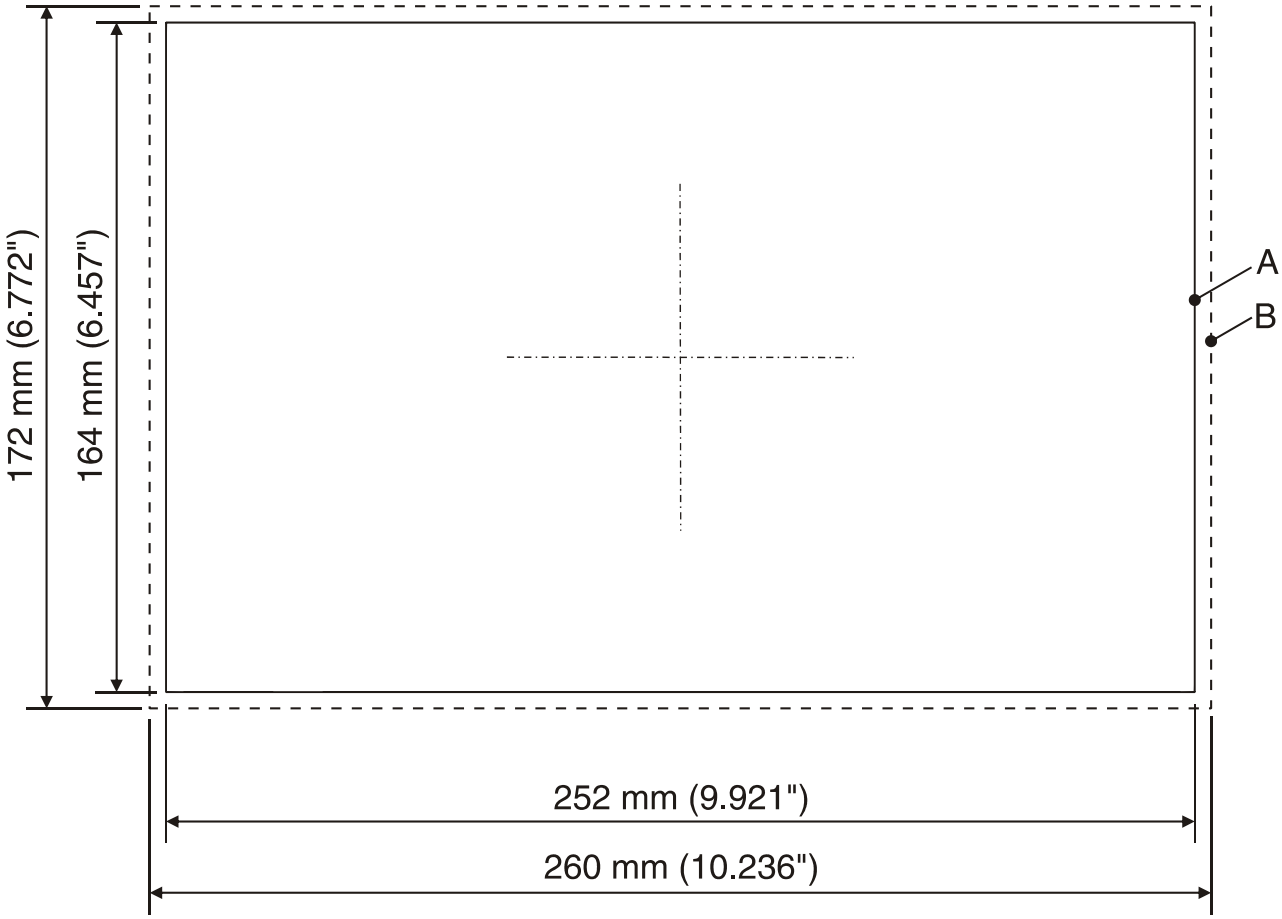

Figure 2-19 TP090ATW

A Mounting Cutout
B Front Panel

2.2.2.8 TP104AT

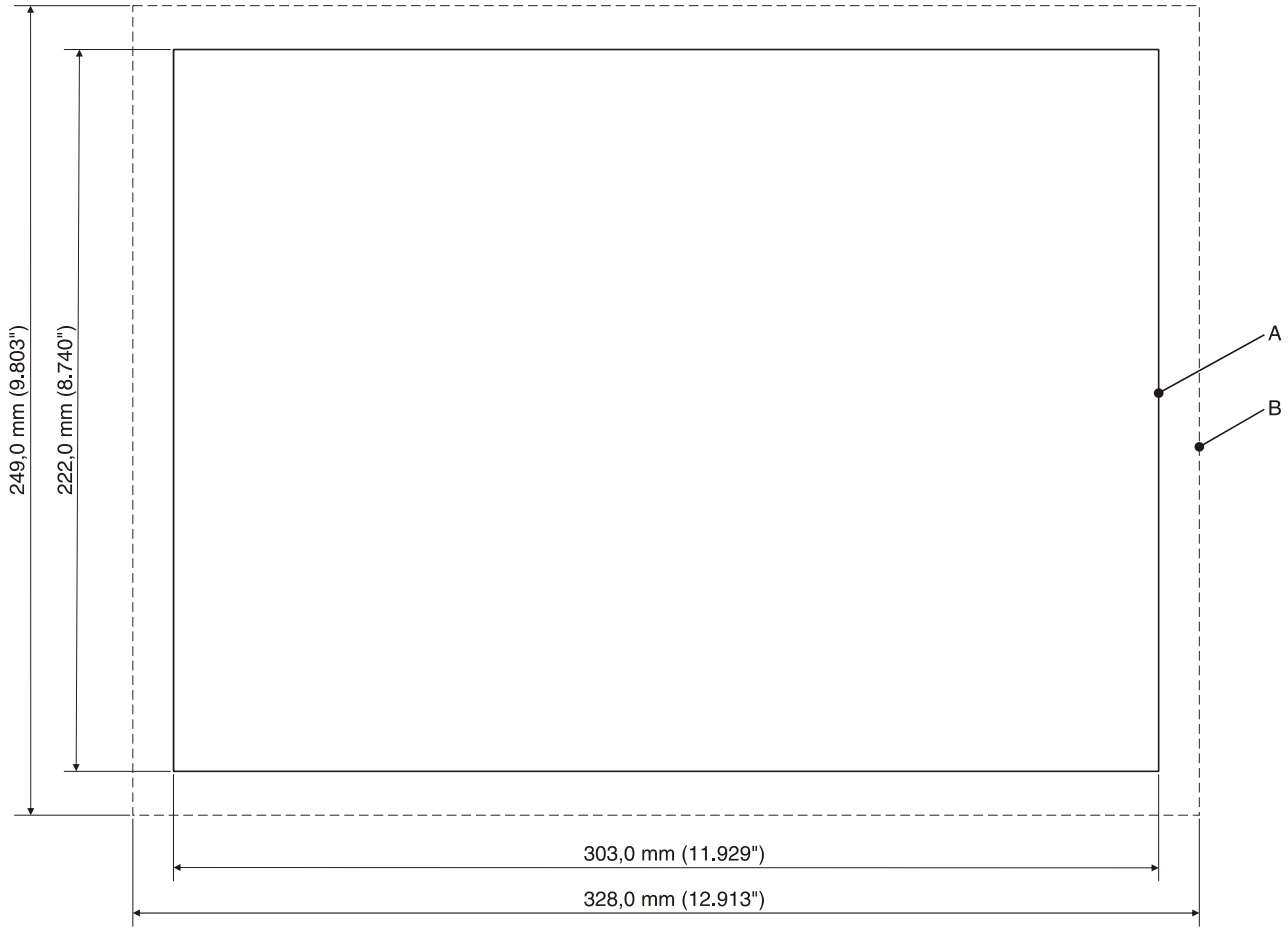

Figure 2-20 TP104AT

A Mounting Cutout
B Front Panel

2.2.2.9 TP105AT

Figure 2-21 TP105AT

A Mounting Cutout
B Front Panel

2.2.2.10 TP120AT

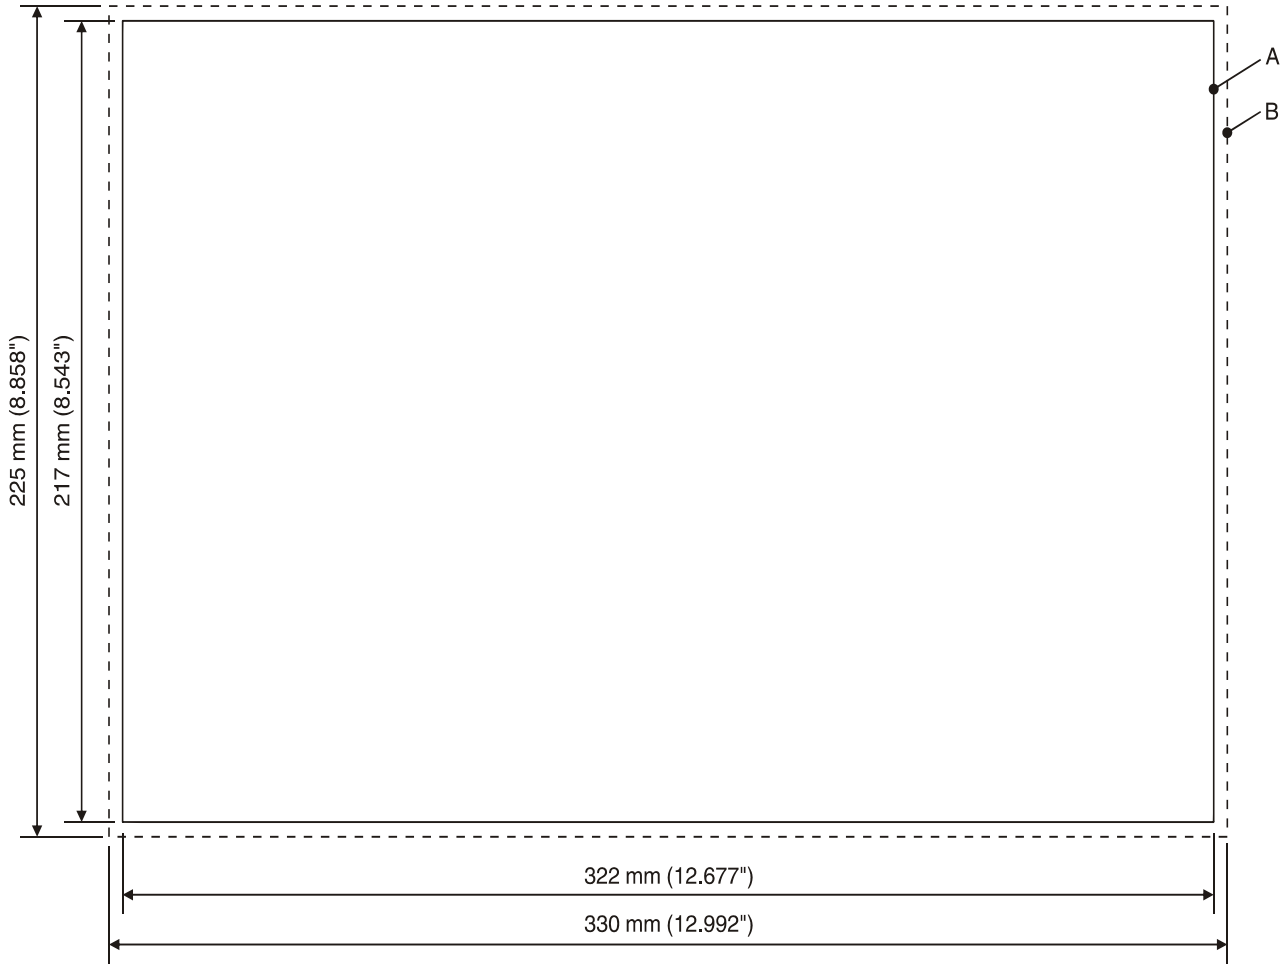

Figure 2-22 TP120AT

A Mounting Cutout
B Front Panel

2.2.2.11 TP151AT

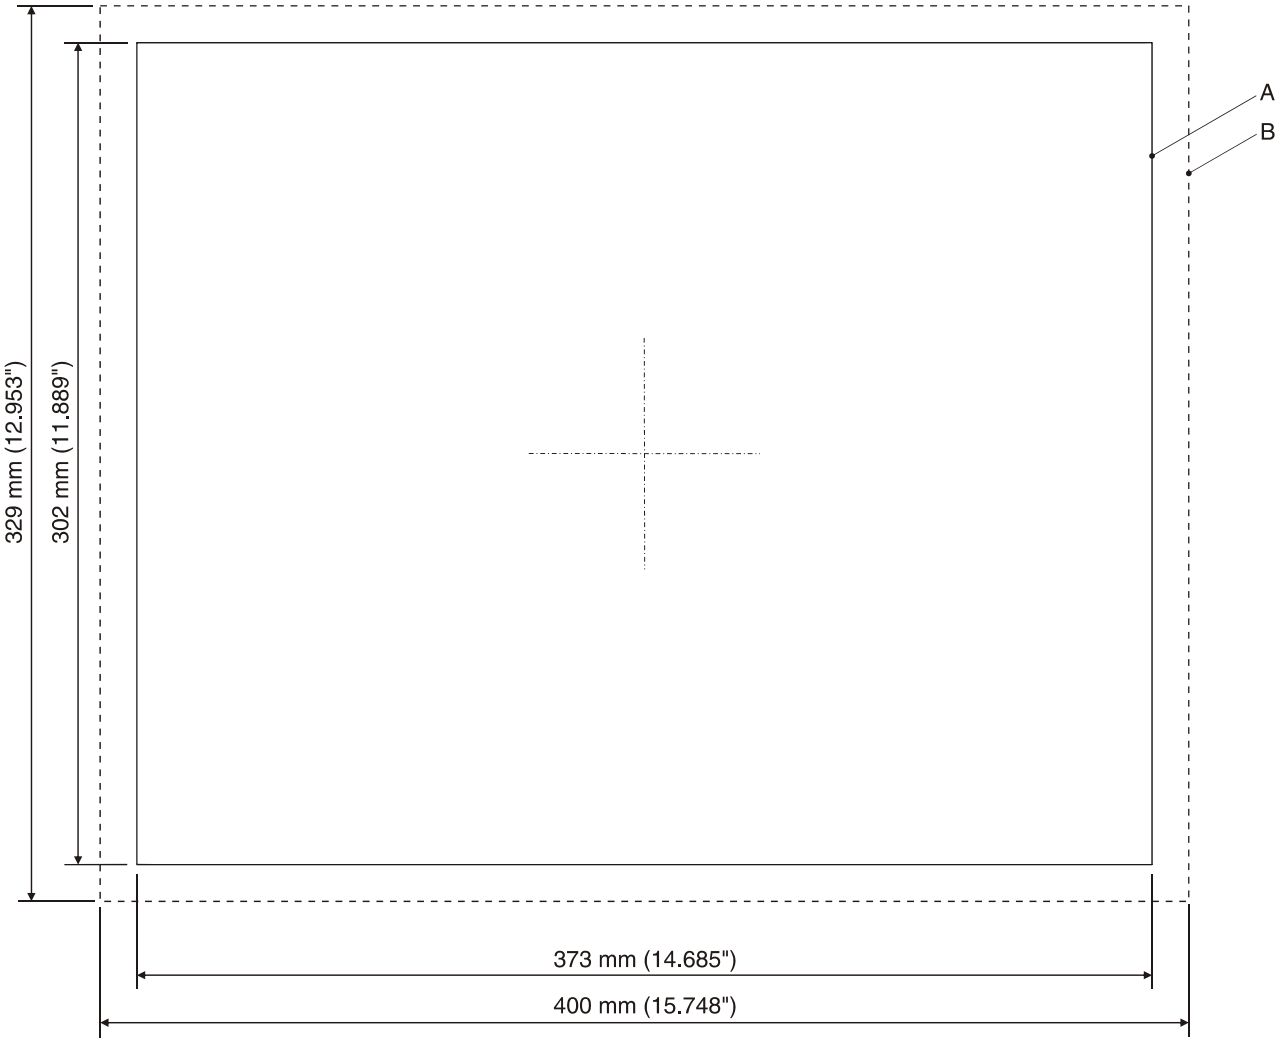

Figure 2-23 TP151AT

A Mounting Cutout
B Front Panel

2.2.3 Side View, Mounting Depth

2.2.3.1 TP11AM, TP11AT

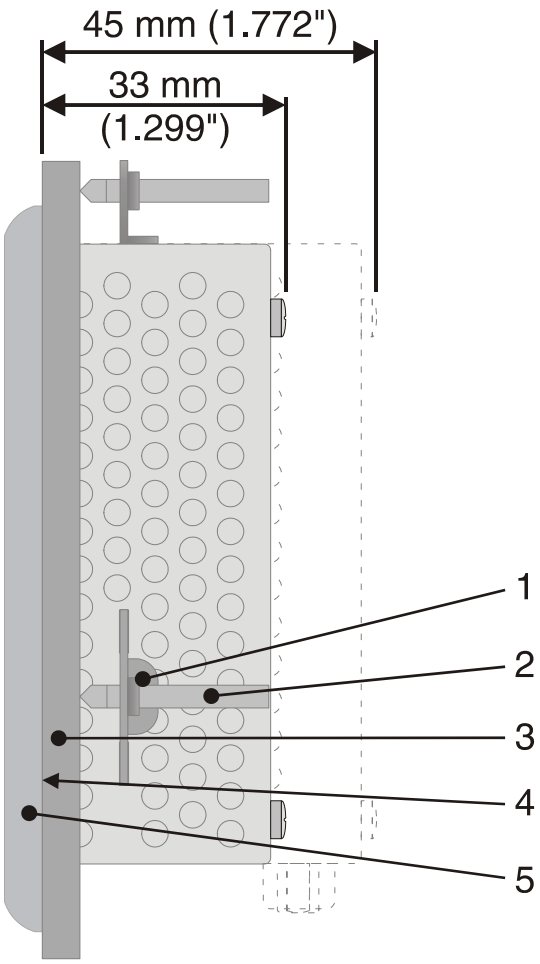

Figure 2-24 TP11AM, TP11AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.2 TP21AM, TP21AS, TP21AT

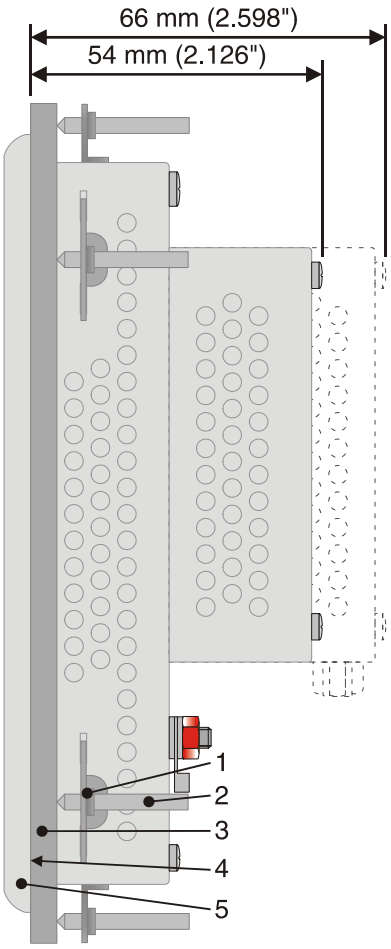

Figure 2-25 TP21AM, TP21AS, TP21AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.3 TP35AM, TP35AT

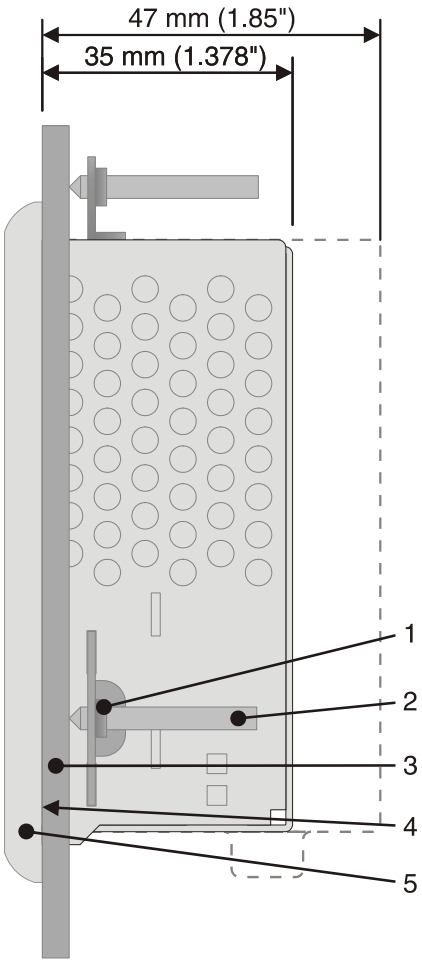

Figure 2-26 TP35AM, TP35AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.4 TP43AT

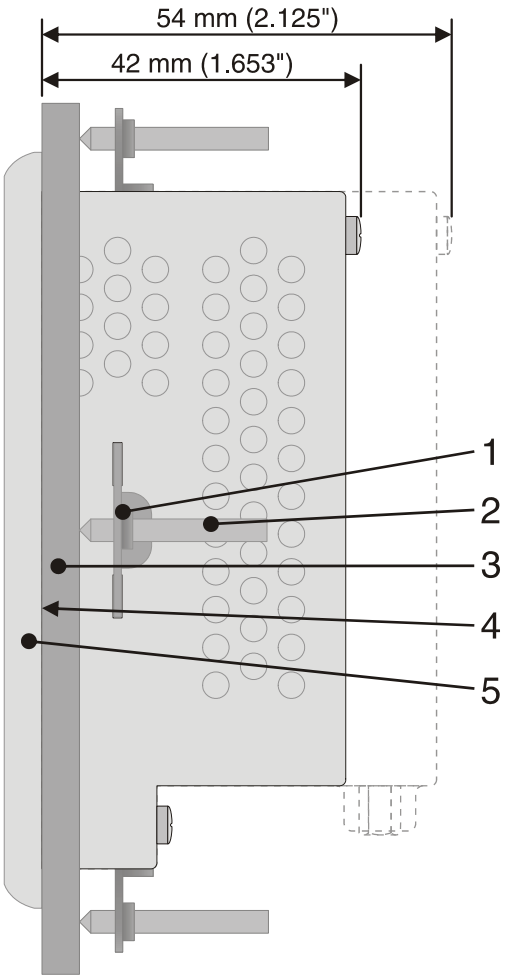

Figure 2-27 TP43AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.5 TP57AM, TP57AT

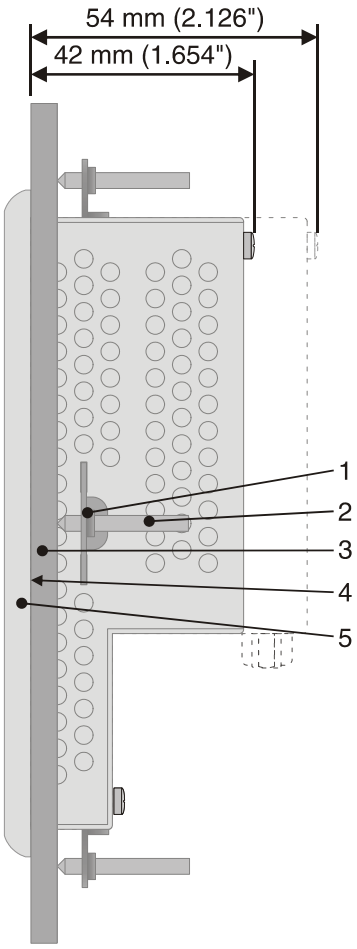

Figure 2-28 TP57AM, TP57AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.6 TP070ATW

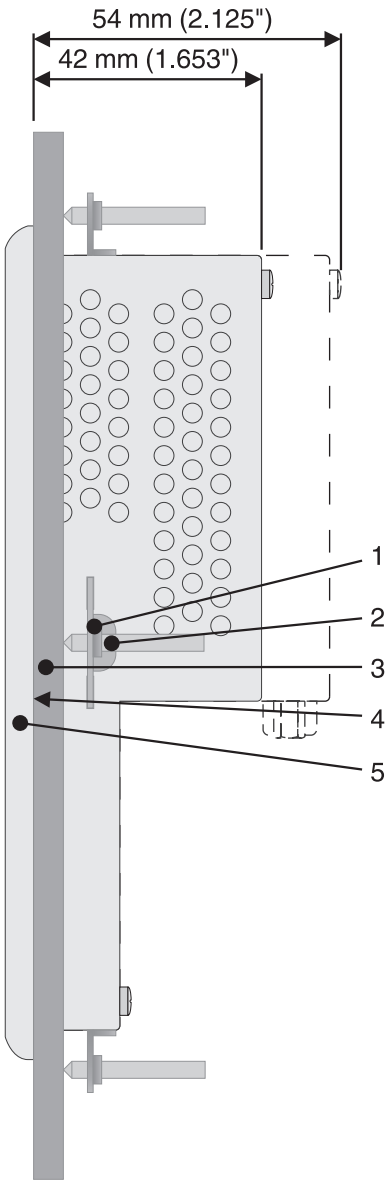

Figure 2-29 TP070ATW

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.7 TP090ATW

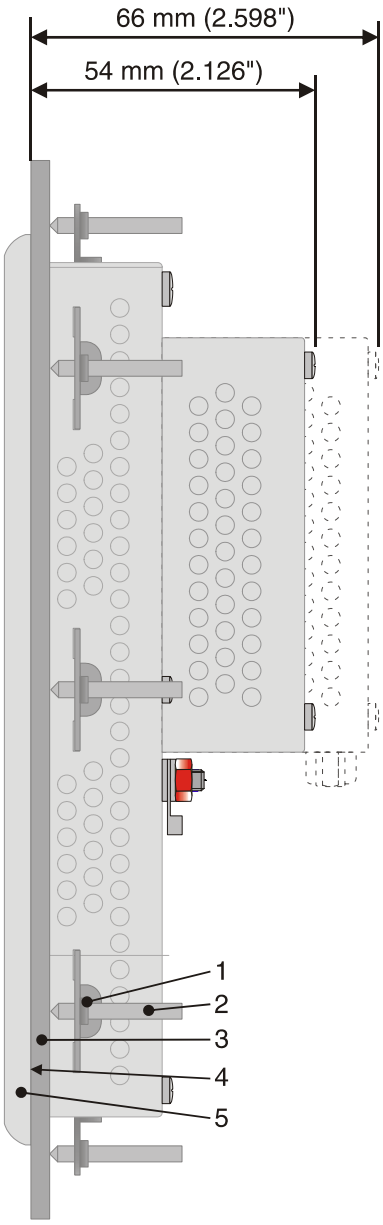

Figure 2-30 TP090ATW

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.8 TP104AT

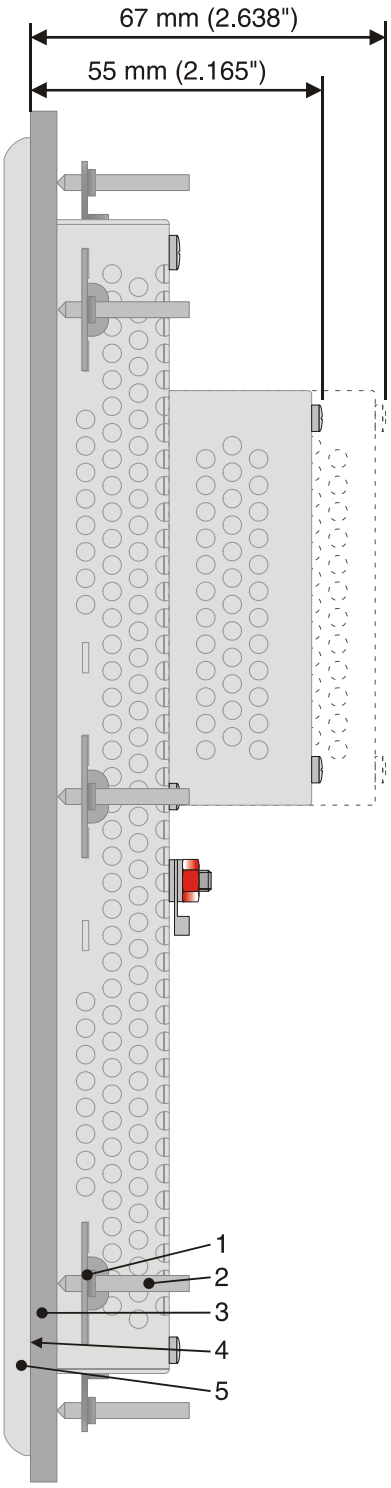

Figure 2-31 TP104AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.9 TP105AT

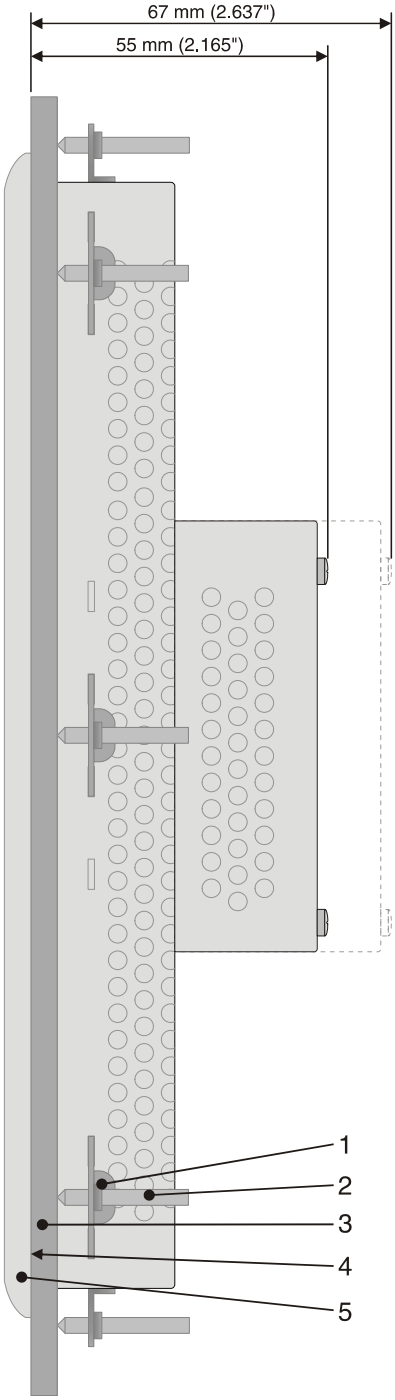

Figure 2-32 TP105AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.10 TP120AT

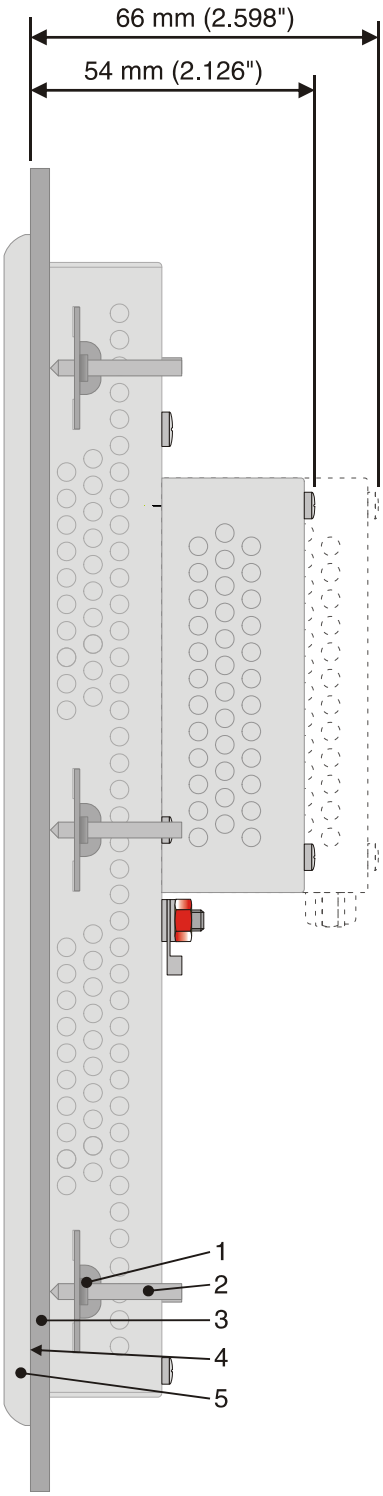

Figure 2-33 TP120AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.2.3.11 TP151AT

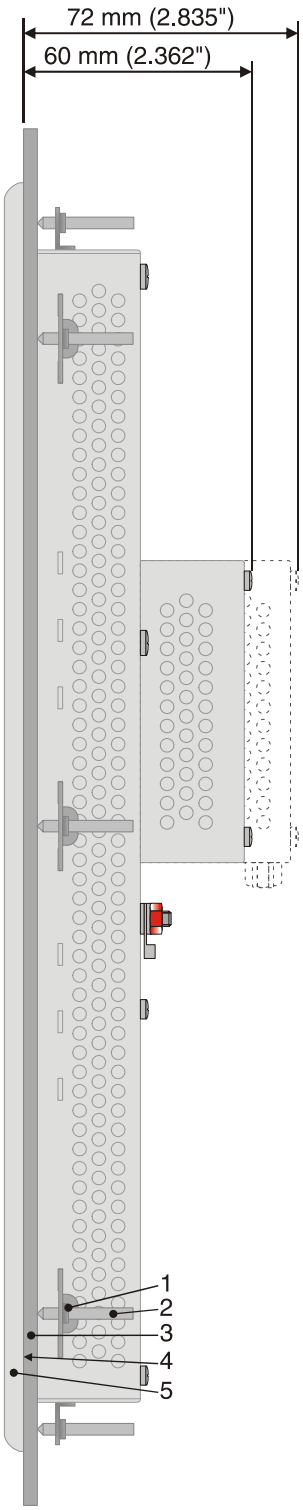

Figure 2-34 TP151AT

1 Mounting Bracket
2 Threaded Pin
3 Mounting Surface Thickness 1 mm to 6 mm
4 Circumferential Seal
5 Front Panel

2.3 Connecting the Device

2.3.1 Supply Voltage

The supply voltage is supplied via pin strip X1. A suitable socket strip is supplied.

Refer to the technical data for the permissible supply voltage of the operating device.

The device has reverse polarity protection. In case of wrong polarity, the device will not operate.

This is a protection class I device. For safe operation, safety extra-low voltage (SELV) in accordance with DIN EN 61131 must be used for the supply voltage.

Connector in the operating device: 3 pin pin strip

Table 2-1 Pin assignment supply voltage

Pin	Designation	Function
1	⏚	Noiseless ground / functional earth ground (FE)
2	0 V	Supply voltage 0 V (GND)
3	⎓ 24 V	Supply voltage ⎓ 24 V

NOTICE: Damage
Cables with finely stranded copper conductors with a minimum cross-section of 0.75 mm² (18 AWG) and a maximum cross-section of 2.5 mm² (14 AWG) must be used for the supply voltage.
You must adhere to the following torques at the connector:
Screw connection of terminal blocks: 0.22 Nm (minimal) to 0.25 Nm (maximum)
Screw flange: 0.3 Nm (maximum)

DANGER: Hazardous voltages
Hazardous voltages can exist inside electrical installations that can pose a danger to humans. Coming in contact with live parts may result in electric shock!

Use the following procedure to connect the device to the supply voltage:

1. Strip approx. 30 mm (1.181") off the outer cable sheath and approx. 5 mm (0.197") off the wires.

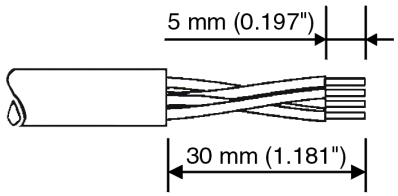

Figure 2-35 Preparing the cable

2. Fit the wires with wire end ferrules and connect the wires to the socket strip.
3. Plug the socket strip onto pin strip X1.
4. Secure the socket strip in place with a screw-type locking to prevent it from slipping out.

2.3.2 Grounding

The grounding is performed - depending on the type of device - with a slip-on sleeve (noiseless ground / functional earth ground) or a ring cable lug (protective ground).

NOTICE: Damage
A separate copper conductor must always be provided for the grounding. The conductor must have a minimum cross-section of 1.5 mm² (16 AWG) and must be kept as short as possible.
You must adhere to a maximum torque of 1 Nm at an protective grounding on the threaded bolt.

1. Strip approx. 5 mm (0.197") off the wires.
2. Fit the stripped wires - depending on the type of device - with a slip-on sleeve or a ring cable lug.
3. Plug the slip-on sleeve on the flat tab or mount the ring cable lug with the nut to the threaded bolt.

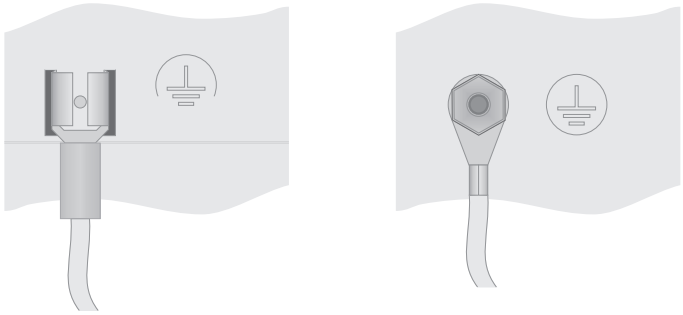

Figure 2-36 Noiseless ground / protective ground

2.4 Switching On

The Windows CE operating system is installed on the operating device. Running on the operating system is the visualization runtime.

2.4.1 Loading Procedure on Windows CE Operating System

The program allows you to use the buttons to make changes to the configuration.

The operating device has 3 operating modes:

– Normal (no button is pressed)
– Setup Main (Button **Press For Setup Main Menu** was pressed)
– Administration (**Admin** button was pressed)

2.4.1.1 Launch Structure

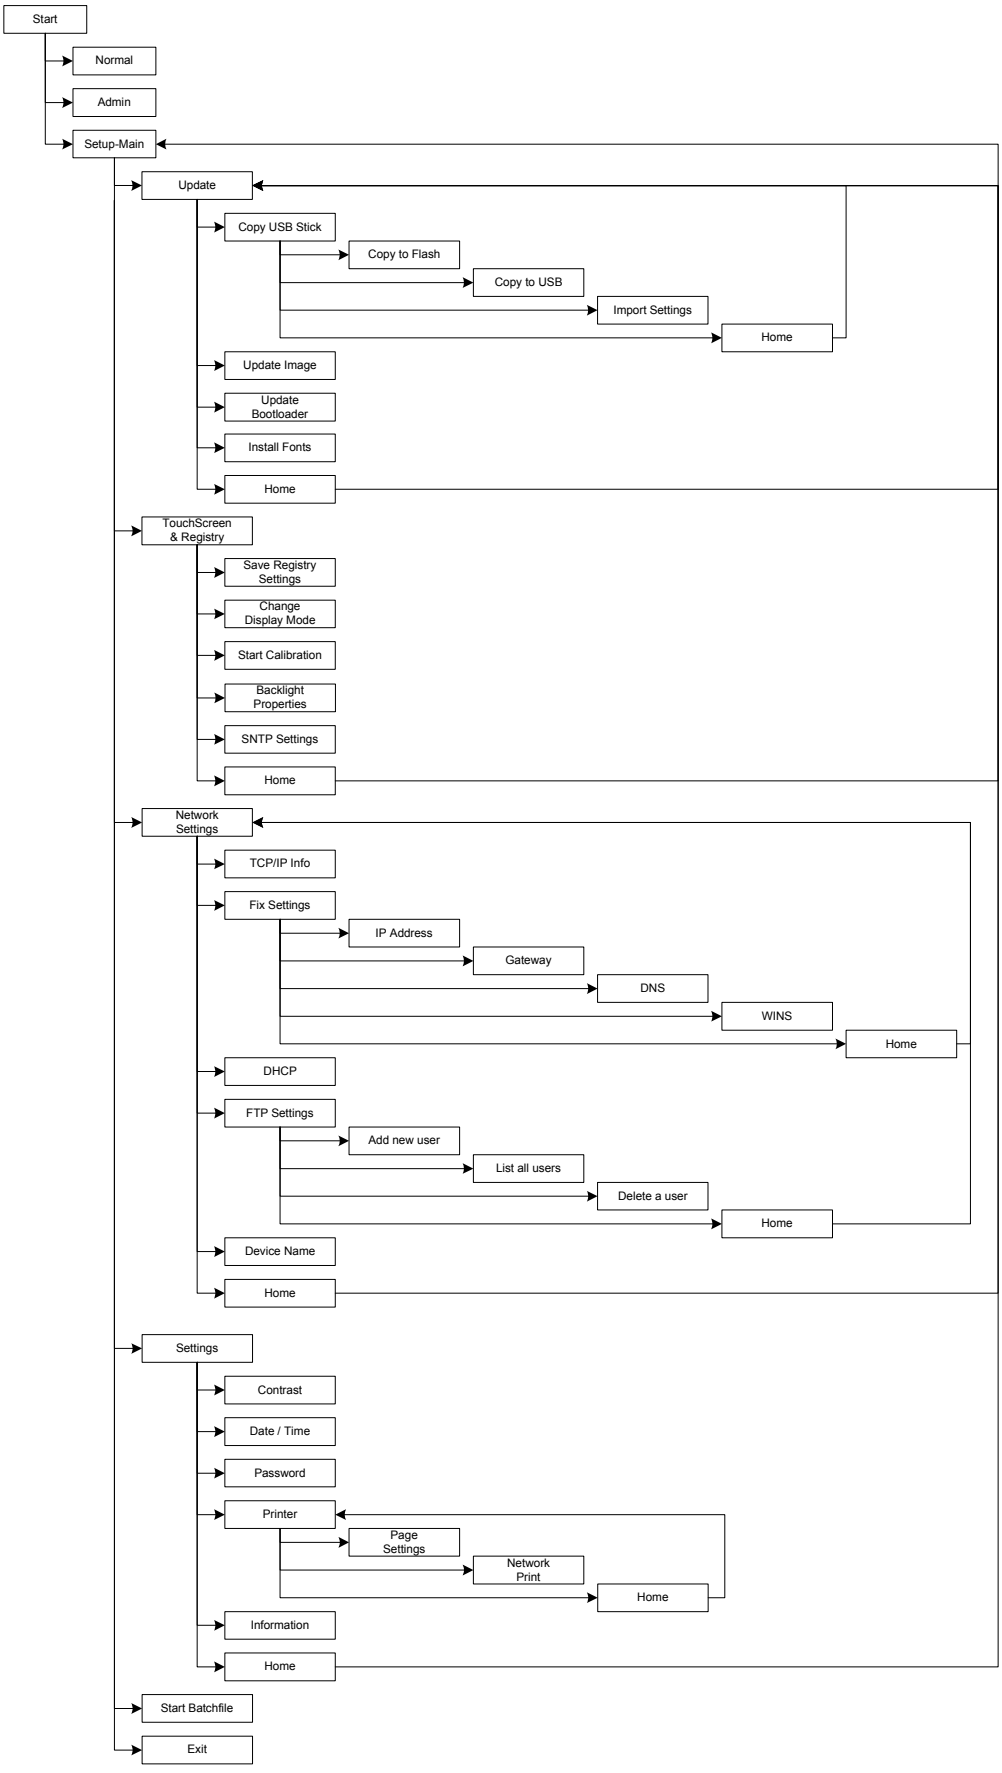

Figure 2-37 Launch structure

2.4.1.2 Normal Mode

The program AppStarter.exe starts from the internal Flash memory.

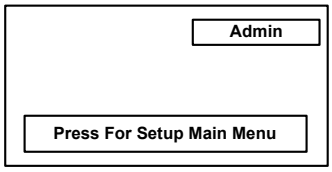

Figure 2-38 Display after startup

Please, note that the device is accessible over the Ethernet only after assignment of an IP address to the Ethernet.

2.4.1.3 Setup Main Mode

If you press the **Press For Setup Main Menu** button during the startup phase, the "Setup Main" mode starts.

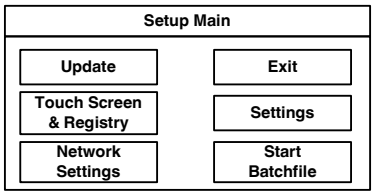

Figure 2-39 Setup Main

Some settings are password-protected. The default password is "+-+-".

Update:

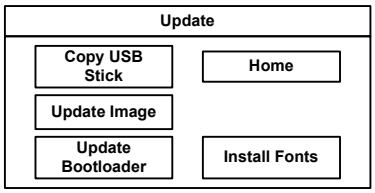

Figure 2-40 Update

Update, Copy USB Stick:

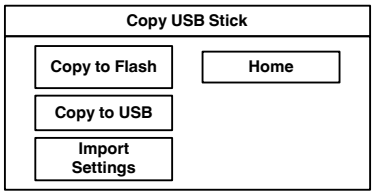

Figure 2-41 Copy USB Stick

Update, Copy USB-Stick, Copy to Flash:

This function copies the data from the USB stick to the internal flash file system.

Several projects can be managed in subdirectories below the directory TSvisRT. If more than one project is in different subdirectories, a choice dialog is displayed. Only directories which contain a project file (*.cb) are listed.

The entire TSvisRT directory or the corresponding subdirectory and the AppStarter.exe are copied into the target directory of the flash file system.

Update, Copy USB Stick, Copy to USB:

Copies the content of the flash file system to the „backup“ directory of the USB stick. This excludes protected system files. A log file is also transferred, which can be used to restore system settings via the „Import Settings“ item.

Update, Copy USB Stick, Import Settings:

An automatically generated log file can be used to restore the system settings. If the „backup“ directory of the USB stick contains a corresponding log file, these settings can be restored.
This is possible only when using identical device types.

Update, Update Image:

If the „image“ subdirectory on the USB stick contains a „*.nb0“ file, this file is used to perform the image update. There must be only one „*.nb0“ file located in this directory, otherwise the update does not start.

In this case, the flash registry is always deactivated so that the image is processed with a new default registry.

Update, Update Bootloader:

If the „bootloader“ subdirectory on the USB stick contains a „*.nb0“ file, this file is used to perform the bootloader update. There must be only one „*.nb0“ file located in this directory, otherwise the update does not start.

Update, Install Fonts:

If one or multiple fonts are in the subfolder "Fonts" of the flash memory, these will be installed at the start-up of the operating device automatically.

Depending on the number and size of fonts, the system start-up take correspondingly more time.

Touch Screen & Registry:

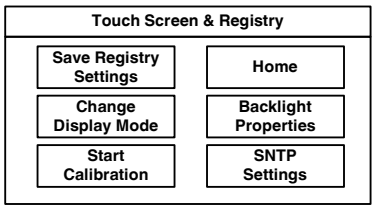

Figure 2-42 Touch Screen & Registry

Touch Screen & Registry, Save Registry Settings:

The entire registry is saved.

Touch Screen & Registry, Change Display Mode:

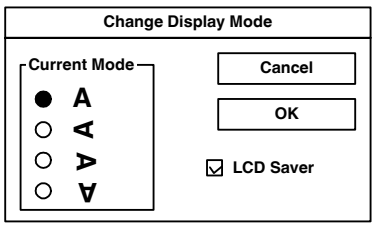

Figure 2-43 Change Display Mode

Set-up of display adjustment.

LCD Saver switches the brightness to the lowest value, if no user operation occures for at least one hour.

This entry is able to be password-protected.

Touch Screen & Registry, Start Calibration:

The touch calibration is started. After the calibration the values are stored automatically in the registry.

Touch Screen & Registry, Backlight Properties:

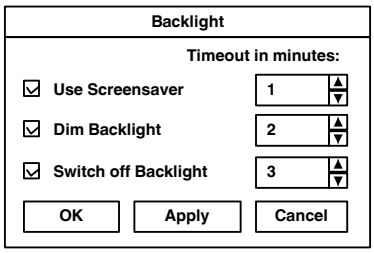

Figure 2-44 Backlight Properties

A screen saver can be activated after the defined time (minutes). It is possible to adjust the screen saver graphic by replacing the file "Screensaver.bmp" in the internal memory. The graphic is replaced at the start up of the operating device automatically when a USB stick - containing the file (Screensaver.bmp) in the "Screensaver" directory - is present.

The brightness of the backlight (dim backlight) can be reduced after the defined time (minutes) and turned off (backlight switch off) in addition.

This entry is able to be password-protected.

Touch Screen & Registry, SNTP Settings:

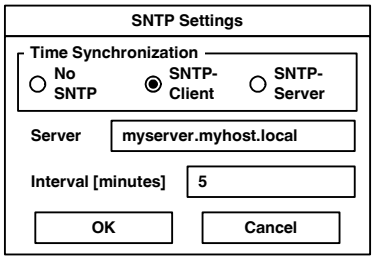

Figure 2-45 SNTP Settings

If you activate the "SNTP-Client" option, you can enter the address of a time server located in the intranet or Internet. The synchronization interval is specified in minutes.
With the option "No SNTP" the synchronization is deactivated.
The operating device may be used as a time server for other devices if the "SNTP-Server" option is active.

This entry is able to be password-protected.

Network Settings:

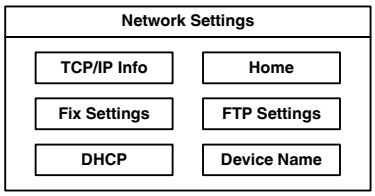

Figure 2-46 Network Settings

All addresses of the **Network Settings** have to be entered in the format "xxx.xxx.xxx.xxx".
Numbers smaller than 100 have to be filled up with leading zeros.
(e.g.: 192.168.42.1 -> 192.168.042.001)

Network Settings, TCP/IP Info:

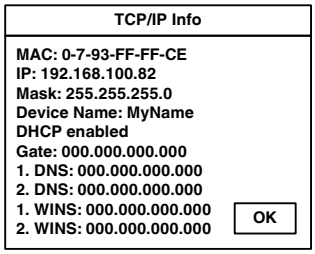

Figure 2-47 TCP/IP Info

The following informations are displayed:

– MAC address
– IP address,
– Subnet mask address,
– Device name,
– DHCP status,
– Gateway address,
– 1. DNS address,
– 2. DNS address,
– 1. WINS address,
– 2. WINS address.

Network Settings, Fix Settings, IP Address:

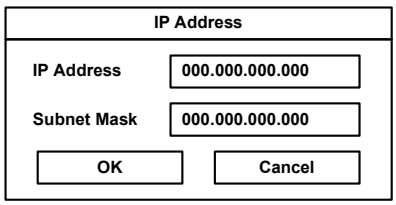

Figure 2-48 IP Address

The system automatically deselects DHCP and optionally enters the settings from the „IPSetting.ini“ file of the USB stick. This file must exist in the root directory of the USB stick.
If no USB stick is connected the information is read from the registry.

This entry is able to be password-protected.

Contents of the „IPSetting.ini“ file:

```
[IPCONFIG]
IPAddress=172.016.042.150
SubnetMask=255.255.255.000
```

Network Settings, Fix Settings, Gateway:

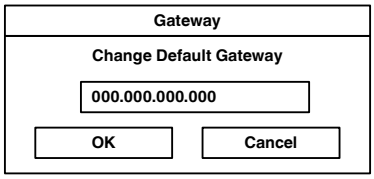

Figure 2-49 Gateway

The system automatically deselects DHCP and optionally enters the settings from the „IPSetting.ini“ file of the USB stick. This file must exist in the root directory of the USB stick.
If no USB stick is connected the information is read from the registry.

This entry is able to be password-protected.

Contents of the „IPSetting.ini“ file:

```
[IPCONFIG]
Gateway=172.016.042.150
```

Network Settings, Fix Settings, DNS:

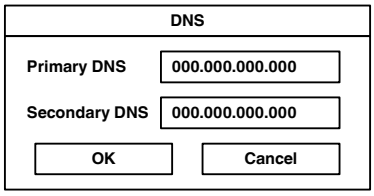

Figure 2-50 DNS

The system deselects DHCP and enters the settings from the „IPSetting.ini“ file of the USB stick. This file must exist in the root directory of the USB stick.
If no USB stick is connected the information is read from the registry.

This entry is able to be password-protected.

Contents of the „IPSetting.ini“ file:

```
[IPCONFIG]
PrimaryDNS=172.016.042.150
SecondaryDNS=172.016.042.151
```

Network Settings, Fix Settings, WINS:

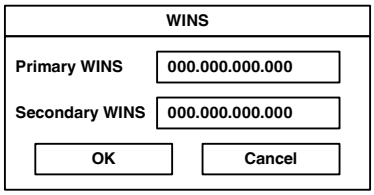

Figure 2-51 WINS

The system automatically deselects DHCP and optionally enters the settings from the „IPSetting.ini“ file of the USB stick. This file must exist in the root directory of the USB stick.
If no USB stick is connected the information is read from the registry.

This entry is able to be password-protected.

Contents of the „IPSetting.ini“ file:

```
[IPCONFIG]
PrimaryWINS=172.016.042.150
SecondaryWINS=172.016.042.151
```

Network Settings, DHCP:

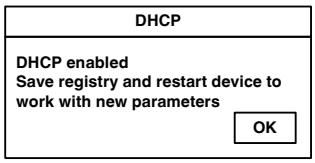

Figure 2-52 DHCP

You may enable DHCP service. You must save this setting when exiting of by using „Save Registry Settings“.

This entry is able to be password-protected.

Network Settings, FTP Settings, Add new user:

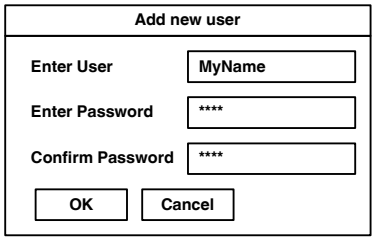

Figure 2-53 Add new user

You may enter a new user name. You have to assign a password to the user name and to confirm it.

If at least one user name is added you cannot login to the FTP server as anonymous anymore.

Network Settings, FTP Settings, List all users:

All users are listed within a DOS box.

Network Settings, FTP Settings, Delete a user:

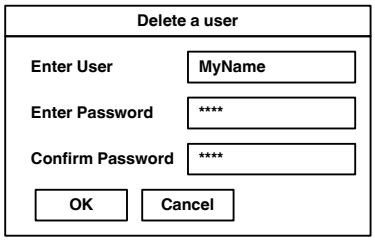

Figure 2-54 Delete a user

You may enter the user name you like to delete.

This entry is able to be password-protected.

Network Settings, Device Name:

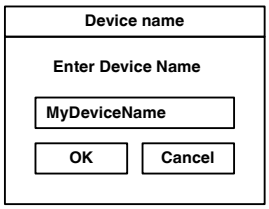

Figure 2-55 Device Name

You can define a device name with up to 14 characters. Via a FTP connection you can access the device with the device name instead of the IP address.

This entry is able to be password-protected.

Settings:

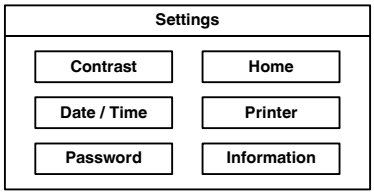

Figure 2-56 Settings

Settings, Contrast:

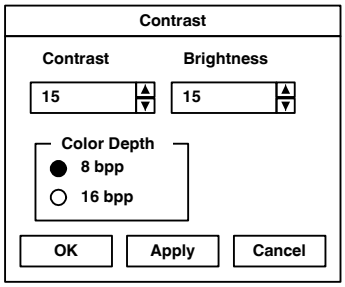

Figure 2-57 Contrast

The operating mode setup main is displayed with default values for contrast and brightness to ensure reading also at faulty values. If you change a value, you have to confirm this in a dialog. If you press **Cancel** or 5 seconds pass without any action the value is not accepted.
Depending on the display type different values can be influenced:

Display Type	Contrast	Brightness
STN (mono)	X	-
STN (color)	X	X
TFT	-	X

Selection of color depth for TFT displays.

This entry is able to be password-protected.

Settings, Date / Time:

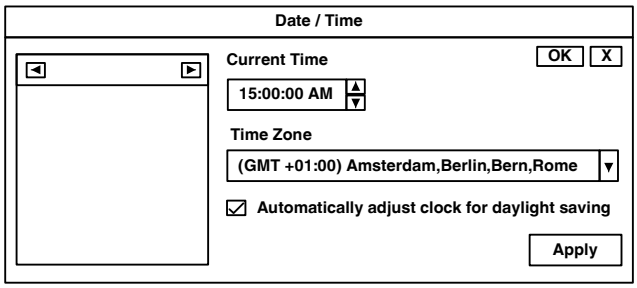

Figure 2-58 Date / Time

Set the date, time and time zone.

Settings, Password:

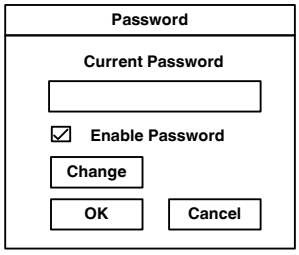

Figure 2-59 Password

The password can be activated, deactivated or redefined. When the password is activated, all password-protected dialog boxes can only be accessed if the password has been entered successfully.

This entry is able to be password-protected.

Settings, Printer:

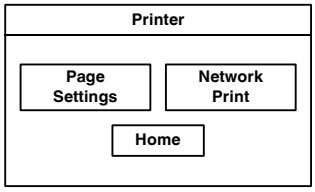

Figure 2-60 Printer

The print function depends on the application program on the operating device. Connection of a printer is possible via the network and the USB interface. The operating system supports PCL3-compatible printers.

Table 2-2 Already used printer models

Model
HP OfficeJet 6000
HP OfficeJet Pro 8000
HP DeskJet 6940
HP DeskJet 5150
HP Laserjet 1505N

This entry is able to be password-protected.

Settings, Printer, Page Settings:

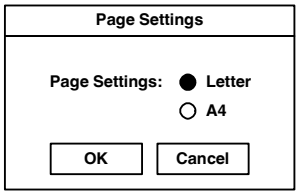

Figure 2-61 Page Settings

Select the paper format, "Letter" or "A4", "Letter" is default.

This entry is automatically stored in the registry.

Settings, Printer, Network Print:

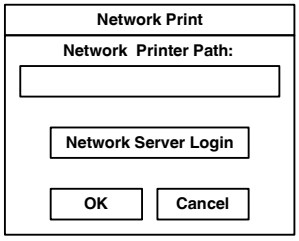

Figure 2-62 Network Print

Enter the network printer path.

This entry is automatically stored in the registry.

Settings, Printer, Network Print, Network Server Login:

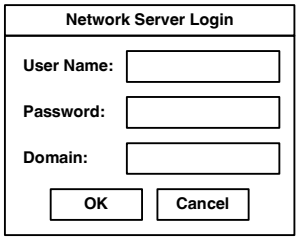

Figure 2-63 Network Server Login

You can save login data for network printing. This enables auto-login when printing without manual input at the operating device.

Enter a user name, password and domain.

This entry is automatically stored in the registry.

Settings, Information:

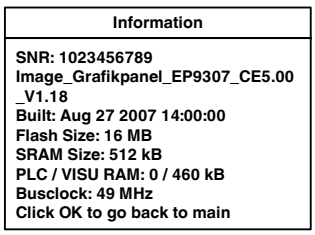

Figure 2-64 Information

The following informations are displayed:

– Serial number
– Product ID
– Image version
– Built version
– Built date
– Size of flash
– Size of SRAM
– Size of PLC / Visu RAM
– Bus clock speed

Start Batchfile:

The „project.bat“ file in the „FlashDrv“ directory starts, if available.

2.4.1.4 Administration Operating Mode

If you press the **Admin** button during the startup phase, the Administration mode of operation starts.

You can use the Admin.ini file to manage the device. This file must exist in the root directory of the USB stick.

This file is used as a dongle to prevent users from changing the device during normal operation.

Possible contents for the Admin.ini file:

Observe upper and lower case for all entries!

Explorer=Off	Deactivates the Explorer in the registry. The change becomes effective on the next device reboot.
Explorer=On	Activates the Explorer in the registry. The change becomes effective on the next device reboot.
Start=explorer.exe	Starts the explorer
Start=MyProgram.exe	Starts the application MyProgram.exe Initial directory is windows. Use the following syntax to start an application on the usb stick: Start=\\\\HardDisk\\MyProgram.exe Use multiple entries to start several applications.
Registry=Default	Destroys the current registry and activates the default registry of the image. The change becomes effective on the next device reboot.
StartRepllog=On	Enables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
StartRepllog=Off	Disables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
LaunchTouch=On	The touch variant of the launch will start at devices with keyboard. The change becomes effective on the next device reboot.

LaunchTouch=Off	The standard variant for the device will start. The change becomes effective on the next device reboot.
Lock=On	The buttons **Press for Setup Main Menu** and **Admin** are disabled. If the file „Admin.ini“ is found on the usb stick the button **Admin** is enabled. Therefore the deactivation of the lock is possible. The change becomes effective on the next device reboot.
Lock=Off	All buttons enabled. The change becomes effective on the next device reboot.
Mode=Development	The shell has full functionality. The change becomes effective on the next device reboot.
Mode=Standard	The Shell is restricted: No task bar and task switch available. Desktop contains the launch icon only. The change becomes effective on the next device reboot.
DeviceName=MyName	Defines the device name of the operating device
;DeviceName=MyName	Comment, no impact

2.5 Identification

The operating device can be identified using the nameplate on the rear of the device.

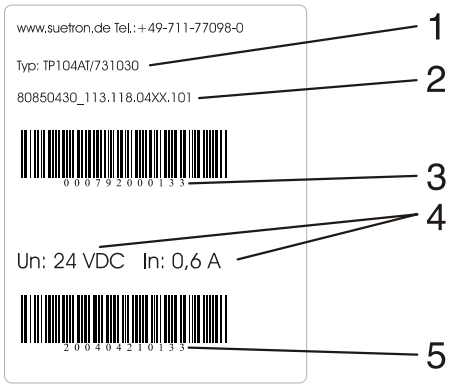

Figure 2-65 Nameplate (example)

1 Order number
2 Version key (at time of delivery)
3 MAC address
4 Voltage and power specification
5 Serial number

2.5.1 Version Key

The version key provides information on the version level of various components at time of delivery.

3 Control and Display Elements

3.1 Display

DANGER: Toxic
If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!

DANGER: Corrosive
If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!

NOTICE: Damage
Static screen parts which displayed over a longer time period (> 1 hour) may result in so-called image sticking.
Image sticking shows itself visual like a „burn-in effect“. The screen displayed before remains visible after a change of image as shade furthermore. Higher environmental temperatures during the operation can accelerate this effect. To avoid the danger of an irreversible damage, the display must time controlled - 15 minutes are recommended - set with a black screen. Image sticking is a technologically property and only can be prevented by a suitable application. Image sticking is not appreciated by display suppliers as a guarantee reason.

Please follow the instructions in the programming software's help topic "How do I configure a black screen as a screen saver" for making such a screen.

The operating device is equipped with different displays depending on variant.

3.1.1 Touch Screen

The device is equipped with a resistive 4 wire touch screen. You operate the device using this touch screen.

NOTICE: Damage
Pointed or sharp objects, such as pens or fingernails, can lead to irreparable damages of the touch screen. Exclusively therefore use the fingertips or the aids indicated in the technical data for the operation.

NOTICE: Damage
To protect the touch screen you can use special protection foils. You receive corresponding protection foils directly from Sütron electronic.

4 Interfaces of the Device

Depending on the device variant, several interfaces are available to you:

Table 4-1 Device Variants

Order Number	Available Interfaces								
	Ethernet (X5)	RS485, RS232 (X6)	CAN (X6)	DeviceNet (X6)	INTERBUS (X6, X7)	MPI (X6)	PROFIBUS-DP (X6)	KNX (X6)	USB (X9, X10)
TPxxxAx/70xxxx	X	-	-	-	-	-	-	-	X
TPxxxAx/78xxxx	X	X	-	-	-	-	-	-	X
TPxxxAx/74xxxx	X	-	X	-	-	-	-	-	X
TPxxxAx/75xxxx	X	-	-	X	-	-	-	-	X
TPxxxAx/76xxxx	X	-	-	-	X	-	-	-	X
TPxxxAx/73xxxx	X	-	-	-	-	X	-	-	X
TPxxxAx/72xxxx	X	-	-	-	-	-	X	-	X
TPxxxAx/80xxxx	X	-	-	-	-	-	-	X	X

4.1 Standard Interfaces

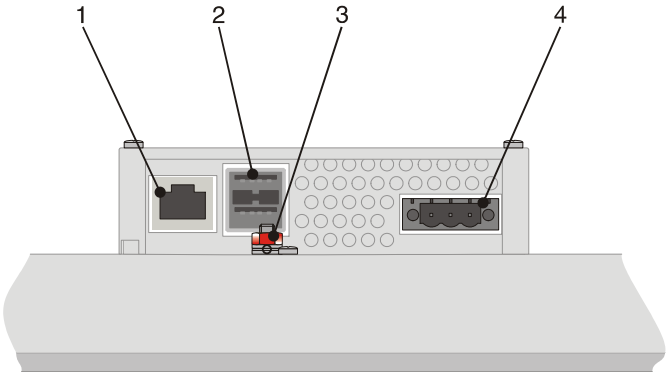

Figure 4-1 Rear view Ethernet

1 Female Connector X5 (Ethernet)
2 Female Connector X9, X10 (USB Host - Type A)
3 Threaded Bolt for Protective Grounding
4 Connector X1 (Supply Voltage)

4.1.1 Ethernet (X5)

A 10/100Base-T Ethernet interface is located at the operating device.

4.1.1.1 Pin Assignment

Connector in the operating device: RJ45 female connector.

Table 4-2 Assignment of the Ethernet interface

Pin	Designation	Function
1	Tx+	Transmitted Data, Positive Polarity
2	Tx-	Transmitted Data, Negative Polarity
3	Rx+	Received Data, Positive Polarity
4	n.c.	Not Connected
5	n.c.	Not Connected
6	Rx-	Received Data, Negative Polarity
7	n.c.	Not Connected
8	n.c.	Not Connected

4.1.1.2 Cable

NOTICE
Use a twisted pair cable of category 5 (CAT 5). The maximum cable length is 100 m (328.084 feet).

See the IEEE 802.3 standard for further information.

4.1.1.3 Diagnostics

Ethernet diagnostics LEDs are located at the operating device.

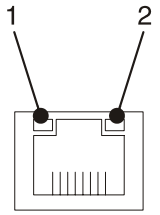

Figure 4-2 Position of the ethernet diagnostics LEDs

Table 4-3 Function of the ethernet diagnostics LEDs

No.	Color	State	Designation	Function
1	Green	ON	XMT	Sending ethernet data telegram
2	Yellow	ON	RCV	Receiving ethernet data telegram

4.1.2 USB (X9, X10)

Two host interfaces are available on the operating device.

NOTICE
Using input devices not suitable for industrial use (e.g. keyboard, mouse) may decrease safety of operation. This includes input devices intended for home and office use.

4.1.2.1 Cable

For the specification of a suitable cable, please refer to the „Universal Serial Bus Specification Rev. 2.0“.

NOTICE
The maximum cable length for the cable used is 2.5 m (8.202 feet).

4.2 Serial Interfaces

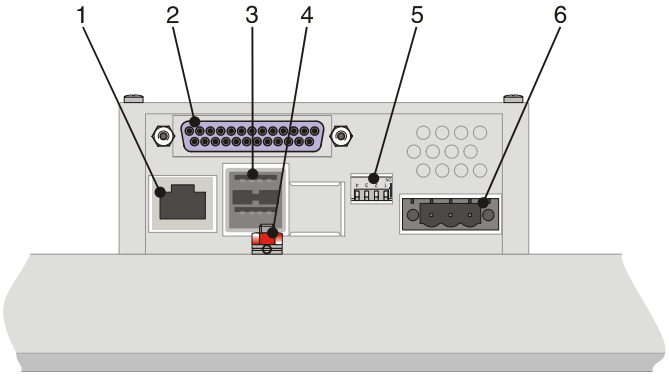

Figure 4-3 Rear view RS422 / RS485 / RS232

1 Female Connector X5 (Ethernet)
2 Female Connector X6 (Serial Interface)
3 Female Connectors X9, X10 (USB Host - Type A)
4 Threaded Bolt for Protective Grounding
5 Termination Switch (RS422/RS485)
6 Connector X1 (Supply Voltage)

4.2.1 RS422 / RS485 (X6)

The interface standard RS422 / RS485 is suitable for point-to-point and multi-point connections.

The wires belonging together are marked with „A“ and „B“. Some descriptions refer to the pins with „-“ and „+“ , where A = - and B = +.

Signal Logic 1	$U_A - U_B <= -0.3$ V i.e. ($U_A < U_B$)
Signal Logic 0	$U_A - U_B >= +0.3$ V i.e. ($U_A > U_B$)

4.2.1.1 Pin Assignment



Figure 4-4 25 pin D-SUB female connector strip

Connector in the operating terminal: 25-pin D-SUB female connector

Table 4-4 Pin assignment RS422/RS485

Pin	Designation	Function		
8	T(A)	Transmitted Data	-	N
9	T(B)	Transmitted Data	+	P
11	SGND	Signal Ground		
22	R(A)	Received Data	-	N
23	R(B)	Received Data	+	P

NOTICE
For the operation of the interface as RS422 / RS485 the pins of the RS232 must not be connected.

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.2.1.2 Termination

Always turn on the termination in a 4-wire point-to-point connection (RS422 / RS485). A sender termination for the quiescent level of the receiver must exist on the remote station.

Turn on the termination only at the two ends of the lines in a 2 or 4-wire multi-point connection (RS422 / RS485).

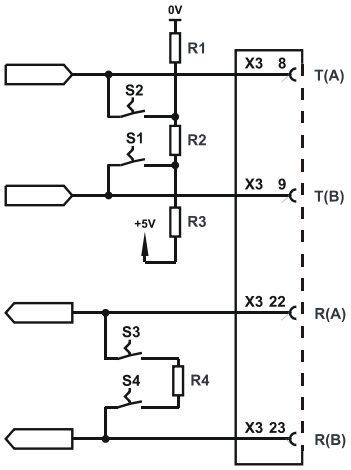

Figure 4-5 Termination possibilities RS422 / RS485 (internal)

Table 4-5 Resistor values - termination RS422 / RS485

Designation	Value
R1, R3	510 Ohm
R2	150 Ohm
R4	120 Ohm

The switch positions for ON or OFF are printed onto the termination switch. Only the specified switch positions are allowed.

Table 4-6 Termination switch

Bus	S1	S2	S3	S4	Function
	Transmitter		Receiver		
2-wire 4-wire –	OFF	OFF	OFF	OFF	Termination is OFF – Line termination is assured by other participants – The quiescent level is ensured by external wiring – RS422 / RS485 unused
2-wire	ON	ON	OFF	OFF	Transmitter Termination is ON (Guarantees quiescent level) Receiver Termination is OFF
4-wire	ON	ON	ON	ON	Transmitter Termination is ON Receiver Termination ON (Point-to-point or multi-point connection at the end of the line)

4.2.2 RS232 (X6)

The serial RS232 interface is suitable to establish a point-to-point connection.

4.2.2.1 Pin Assignment



Figure 4-6 25 pin D-SUB female connector strip

Connector in the operating terminal: 25-pin D-SUB female connector

Table 4-7 Pin assignment RS232

Pin	Designation	Function
6	TD	Transmitted Data
15	CTS	Clear to Send
17	RTS	Request to Send
18	RD	Received Data
25	SGND	Signal Ground

NOTICE
For the operation of the interface as RS232 the pins of the RS422 / RS485 must not be connected.

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.2.2.2 Termination

NOTICE
When the interface is operated as a RS232, the termination for the RS485 must be switched OFF.

4.3 Field Bus Interfaces

4.3.1 CAN Slave (X6)

The CAN bus is a high speed bus in accordance with ISO-DIS 11898.

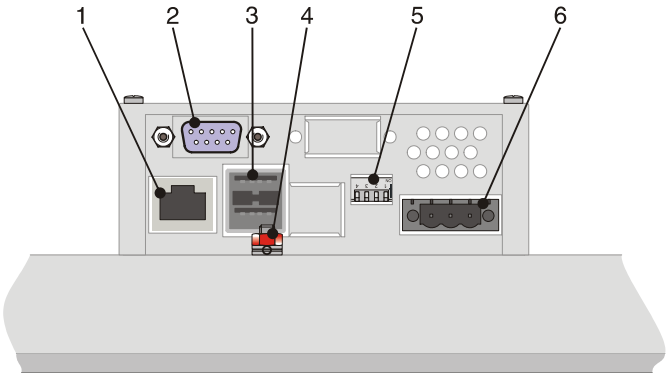

Figure 4-7 Rear view CAN Slave

1 Female Connector X5 (Ethernet)
2 Connector X6 (CAN)
3 Female Connectors X9, X10 (USB Host - Type A)
4 Threaded Bolt for Protective Grounding
5 Slope Control Switch (CAN)
6 Connector X1 (Supply Voltage)

4.3.1.1 Pin Assignment



Figure 4-8 9 pin D-SUB male connector strip

Connector in the terminal: 9 pin D-SUB male connector

Table 4-8 Pin assignment CAN

Pin	Designation	Function
1	nc	Not Connected
2	CAN_L	CAN_L Bus Line
3	CAN_GND	CAN Ground
4	nc	Not Connected
5	nc	Not Connected
6	CAN_GND	CAN Ground
7	CAN_H	CAN_H Bus Line
8	nc	Not Connected
9	nc	Not Connected

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.3.1.2 Cable

NOTICE
A shielded twisted-pair cable (cable type LiYCY-TP) complying with ISO 11898 must be used.

The cable must have the following characteristics:

Table 4-9 Cable characteristics CAN

Parameters	Value
Impedance	Min.: 108 Ohm Nom.: 120 Ohm Max.: 132 Ohm
Specific Resistance	70 mOhm/m
Specific Line Delay	5 ns/m

The maximum cable length depends on the baud rate used.

Table 4-10 Baud rate CAN

Baud rate	Cable length
20 kBit/s	1000 m
125 kBit/s	500 m
250 kBit/s	250 m
500 kBit/s	100 m
1000 kBit/s	25 m

4.3.1.3 Termination

Terminate the CAN bus at both ends by terminating resistors (120 Ohm).

Table 4-11 Termination switch

S1	S2	S3	S4	Function
X	X	I	X	Termination (120 Ohm)
X	X	–	X	No Termination

Legend for table:

I = Switch ON
– = Switch OFF
X = Any position

4.3.1.4 Diagnostics

A diagnostics LED is located on the rear of the operating device. The LED shows the states of the bus system.

The diagnostics LED on the operating device has the following functions:

Table 4-12 Functions of the CAN diagnostics LED

Color	State	Function
Green	Off	Terminal Disconnected from Bus
Green	On	Communication Active
Green	Flashing	Sporadic Bus Error

4.3.1.5 Slope Control

The slope control switch is located on the rear of the operating device.

You can use the slope control switch to set the edge steepness of the CAN signals. By default, the operating devices are used with the switch set to "High".

Table 4-13 Slope control switch

S1	S2	S3	S4	Function
X	X	X	I	High speed
X	X	X	–	Low speed

Legend for table:

I = Switch ON
– = Switch OFF
X = Any position

4.3.2 DeviceNet Slave (X6)

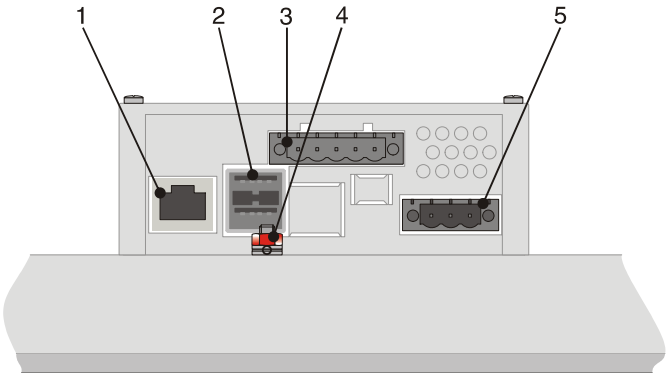

Figure 4-9 Rear view DeviceNet slave

1 Female Connector X5 (Ethernet)
2 Female Connectors X9, X10 (USB Host - Type A)
3 Connector X6 (DeviceNet)
4 Threaded Bolt for Protective Grounding
5 Connector X1 (Supply Voltage)

4.3.2.1 Pin Assignment



Figure 4-10 5 pin connector

Connector in the operating terminal: 5 pin male connector strip.

Table 4-14 Pin assignment DeviceNet

Pin	Designation	Function
1	nc	Not Connected
2	CAN_L	CAN_L Bus Line
3	Drain	Shield
4	CAN_H	CAN_H Bus Line
5	nc	Not Connected

For the connection, use a 5 pin connector with gold-plated contacts and cover cap. A suitable connector with cover cap can be obtained directly from Sütron electronic.

4.3.2.2 Cable

NOTICE
A DeviceNet-certified cable must be used.

Table 4-15 Data line DeviceNet

Cable Type	Loop Resistance	Surge Impedance	Capacitance per Unit Length
2 x 1.1 mm	< 22.6 Ohm/km	120 Ohm	< 39.4 pf/m
2 x 0.6 mm	< 91.8 Ohm/km	120 Ohm	< 39.4 pf/m

The maximum length allowed for spur lines connected to the bus cable is 6 meters. The overall length of the bus cable including all spur lines is not to exceed the maximum length listed in the table below.

The maximum cable length depends on the baud rate and the cable type used.

Table 4-16 Baud rate DeviceNet

Baud Rate	Cable Type	Cable Length
125 kBit/s	2 x 1.1 mm	500 m
	2 x 0.6 mm	100 m
250 kBit/s	2 x 1.1 mm	250 m
	2 x 0.6 mm	100 m
500 kBit/s	2 x 1.1 mm	100 m
	2 x 0.6 mm	100 m

4.3.2.3 Termination

Terminate the DeviceNet bus at both ends directly at the connector by terminating resistors (120 Ohm).

4.3.2.4 Diagnostics

A diagnostics LED is located on the rear of the operating device. The LED shows the states of the bus system.

The diagnostics LED on the operating device has the following functions:

Table 4-17 Functions of the DeviceNet diagnostics LED

Color	State	Function
Green	Off	Terminal is Disconnected from Bus
Green	On	Communication Active
Green	Flashing	Sporadic Bus Error

4.3.3 INTERBUS Slave (X6, X7)

The device can be integrated into the INTERBUS using the interfaces available for INTERBUS connections.

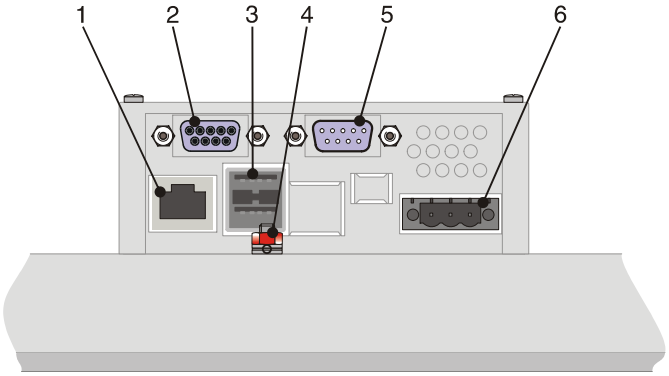

Figure 4-11 Rear view INTERBUS

1 Female Connector X5 (Ethernet)
2 Female Connector X6 (INTERBUS - Remotebus Out)
3 Female Connector X9, X10 (USB Host - Type A)
4 Threaded Bolt for Protective Grounding
5 Male Connector X7 (INTERBUS - Remotebus In)
6 Connector X1 (Supply Voltage)

4.3.3.1 Pin Assignment



Figure 4-12 9 pin D-SUB male connector strip and female connector strip

Connector in the terminal: 9 pin D-SUB male connector strip for remote bus in.

Table 4-18 Pin assignment remote bus in (INTERBUS)

Pin	Designation	Function
1	DO	Data Input
2	DI	Data Output
3	GND	Ground
4	nc	Not Connected
5	nc	Not Connected
6	/DO	Data Input, Inverted
7	/DI	Data Output, Inverted
8	nc	Not Connected
9	nc	Not Connected

Connector in the terminal: 9 pin D-SUB female connector strip for remote bus out.

Table 4-19 Pin assignment remote bus out (INTERBUS)

Pin	Designation	Function
1	DO	Data Output
2	DI	Data Input
3	GND	Ground
4	nc	Not Connected
5	+5 V	Power Supply +5 VDC
6	/DO	Data Output, Inverted
7	/DI	Data Input, Inverted
8	nc	Not Connected
9	RBST	Remote Bus Status

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.3.3.2 Cable

NOTICE
A shielded twisted-pair cable (cable type LiYCY-TP) must be used. The maximum cable length depends on its use within the INTERBUS topology.

4.3.3.3 Diagnostics

The diagnostics LEDs are located at the rear of the operating device. The LEDs show the states of the bus system.

The diagnostics LEDs at the operating device has the following functions:

Table 4-20 Functions of the INTERBUS diagnostics LEDs

Designation	Color	State	Function
RC	Green	On	Remote Bus Check
+5 V	Green	On	Supply Voltage OK
		Off	No Supply Voltage
BA	Green	On	Bus Active
		Off	Bus Not Active
RD	Red	On	Remote Bus Inactive
TR	Green	On	PCP Active (Module Receives / Transmitts Data)
		Off	PCP not Active

4.3.4 MPI Slave (X6)

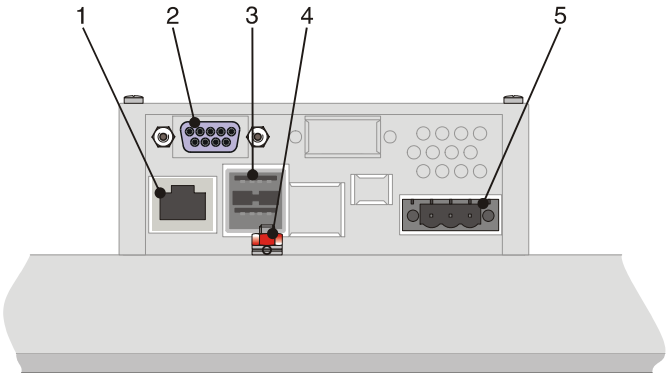

Figure 4-13 Rear view MPI slave

1 Female Connector X5 (Ethernet)
2 Female Connector X6 (MPI)
3 Female Connectors X9, X10 (USB Host - Type A)
4 Threaded Bolt for Protective Grounding
5 Connector X1 (Supply Voltage)

4.3.4.1 Pin Assignment



Figure 4-14 9 pin D-SUB female connector strip

Connector in the terminal: 9 pin D-SUB female connector

Table 4-21 Pin assignment MPI

Pin	Designation	Function
1	nc	Not Connected
2	nc	Not Connected
3	RxD/TxD-P	Received Data / Transmitted Data Plus
4	CNTR-P	Repeater Control Signal Plus
5	DGND	Data Transmission Potential
6	VP	Supply Voltage of Terminators Plus
7	nc	Not Connected
8	RxD/TxD-N	Received Data / Transmitted Data Minus
9	CNTR-N	Repeater Control Signal Minus

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.3.4.2 Cable

NOTICE
Any cable that conforms with the following parameters can be used:

Table 4-22 Cable characteristics MPI

Parameters	Value
Loop Resistance	110 Ohm/km
Capacitance	30 nF/km
Surge Impedance	150 Ohm

The maximum length of one segment is 50 m which cannot be exceeded. This 50 m applies from the first node to the last node in the segment.

For further information on the installation, please refer to the Siemens manual "SIMATIC S7-400 and M7-400 Programmable Controllers Hardware and Installation, 6ES7498-8AA03-8BA0".

4.3.4.3 Termination

The bus line is terminated at the connector.
For point-to-point connections, always activate the termination. For multi-point connections, only activate the termination at the cable end. For spur lines, always deactivate the termination.

4.3.4.4 Diagnostics

A diagnostics LED is located on the rear of the operating device. The LED shows the states of the bus system.

The diagnostics LED on the operating device has the following functions:

Table 4-23 Function of the MPI diagnostics LED

Color	State	Function
Green	Flashing	Operating Device has the Token

4.3.5 PROFIBUS-DP Slave (X6)

The interface for PROFIBUS-DP connections is available to integrate the device into a PROFIBUS-DP structure.

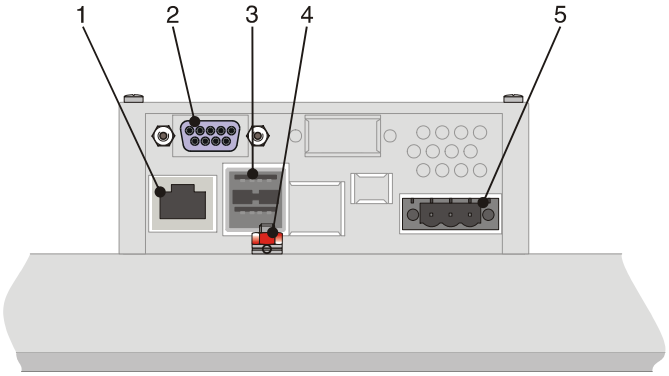

Figure 4-15 Rear view PROFIBUS-DP

1 Female Connector X5 (Ethernet)
2 Female Connector X6 (PROFIBUS)
3 Female Connectors X9, X10 (USB Host - Type A)
4 Threaded Bolt for Protective Grounding
5 Connector X1 (Supply Voltage)

4.3.5.1 Pin Assignment



Figure 4-16 9 pin D-SUB female connector strip

Connector in the operating device: 9 pin D-SUB female connector.

Table 4-24 Pin assignment PROFIBUS-DP

Pin	Designation	Function
1	nc	Not Connected
2	nc	Not Connected
3	RxD/TxD-P	Received Data / Transmitted Data Plus (+) (red)
4	CNTR-P	Repeater Control Signal Plus (+)
5	DGND	Ground for data signals and VP
6	VP	Supply Voltage (+5 V) of Terminators Plus
7	nc	Not Connected
8	RxD/TxD-N	Received Data / Transmitted Data Minus (-) (green)
9	CNTR-N	Repeater Control Signal Minus (-)

NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors“ on page 4-79.

4.3.5.2 Cable

NOTICE
Any PROFIBUS-DP-approved cables specified in the EN 50170 as cable type A can be used.

Table 4-25 Cable characteristics PROFIBUS

Parameters	Value
Impedance	136 to 165 Ohm
Capacitance	< 30 pf/m
Loop Resistance	110 Ohm/km
Wire Gauge	0.64 mm

The maximum cable length depends on the baud rate (DIN EN 19245 Part 3).

Table 4-26 Baud rate PROFIBUS-DP

Baud Rate	Cable Length
187.5 kBit/s	1000 m
500 kBit/s	400 m
1500 kBit/s	200 m
3000 to 12000 kBit/s	100 m

4.3.5.3 Termination

Terminate the PROFIBUS at both ends by terminating resistors. If you are using special PROFIBUS connectors, these resistors are usually integrated into the connector and can be connected.

4.3.5.4 Diagnostics

A diagnostics LED is located on the rear of the operating device. The LED shows the states of the bus system.

The diagnostics LED on the operating device has the following functions:

Table 4-27 Function of the PROFIBUS-DP diagnostics LED

Color	State	Function
Green	ON	Communication Active

4.3.6 KNX (X6)

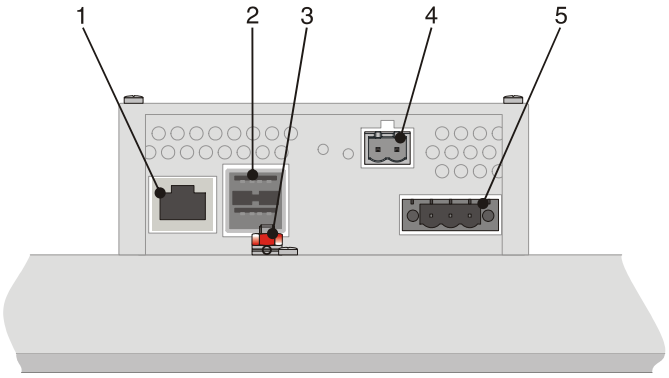

Figure 4-17 Rear view KNX

1 Female Connector X5 (Ethernet)
2 Female Connectors X9, X10 (USB Host - Type A)
3 Threaded Bolt for Protective Grounding
4 Male Connector X6 (KNX)
5 Connector X1 (Supply Voltage)

4.3.6.1 Pin Assignment

Figure 4-18 2 pin male connector strip

Connector in the operating device: 2 pin male connector strip.

Table 4-28 Pin assignment KNX

Pin	Designation	Function
1	-	Ground
2	+	Supply Voltage/ Communication

4.4 Shielding D-SUB Connectors

You must shield D-SUB connectors as follows:

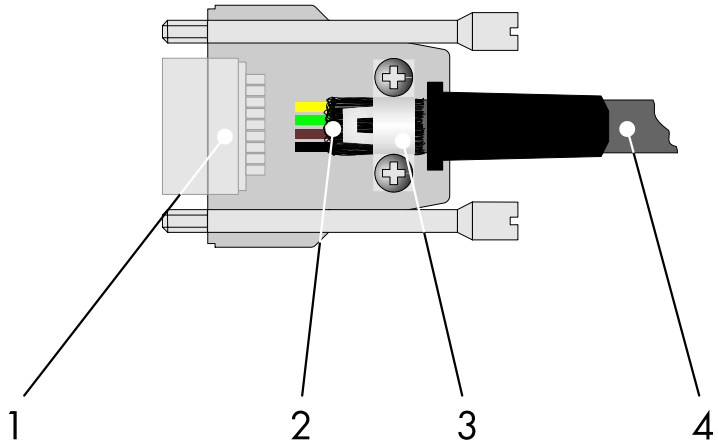

Figure 4-19 Shielding D-SUB connectors

1 D-SUB connector
2 Shield
3 Cable clip
4 Cable

The shield must be folded back into a flat position over the cable sheath.

When fastening the cable with the cable clip, as much of the shielding as possible must be in contact with the housing and sufficient strain relieve must be ensured.

5 Maintenance and Servicing

5.1 Front Panel

Only use a damp cloth to remove any dirt from the front panel.

5.2 Fuse

NOTICE: Damage
The semiconductor fuse cannot be replaced!

A semiconductor fuse is used to protect the device. Once the fuse has been tripped, the device must be disconnected from the supply voltage to allow the semiconductor fuse to regenerate. At an ambient temperature of 20 °C (68 °F), the regeneration takes approximately 20 seconds. The higher the ambient temperature, the longer the regeneration takes.

5.3 Battery

The built-in battery preserves the data in the SRAM and supplies the real-time clock with power. The minimum battery life is 5 years, even under unfavorable operating conditions. When the battery runs down, the message "Change battery" is generated automatically.

We recommend you change the battery approximately every 4 years as part of the regular maintenance work. A prepared battery including connector can be obtained directly from Sütron electronic.

If the "Change battery" message is detected too late, data in the SRAM may have already been lost. For this reason, after changing a battery, always check data such as editable passwords, parameters in the system variables, data sets of the recipes and entries in the message system.

5.3.1 Changing the Battery

CAUTION: Explosive
Do not throw lithium batteries into fire, do not heat to 100 °C or higher and do not recharge.

CAUTION: Toxic
Do not open lithium batteries.

NOTICE: Damage
Batteries must only be changed by authorized and trained experts!

NOTICE: Damage
For changing the battery you may only use replacement batteries of Sütron electronic.

NOTICE: Damage
Electrostatic discharge can damage electronic components. Observe the ESD protective measures!

To ensure that the data in the SRAM and the time are preserved, it is possible to change the battery under operating voltage. Observe the corresponding safety notices!

1. Remove the screws on the rear of the device and lift off the enclosure cover.
2. Remove the glue strip securing the battery.
3. Disconnect the connector from the battery and remove the dead battery.
4. Plug in the cable for the new battery.
5. Use a glue strip to attach the new battery to the enclosure.
6. Place the enclosure cover back onto the device.
7. Carefully tighten the screws of the enclosure cover.

5.3.2 Battery Disposal

The manufacturer is obliged to mark batteries with this symbol before first placing into market. The symbol is extended by the chemical symbols if the following limiting values are exceeded:

More than 0.0005 mass percent mercury	Hg
More than 0.002 mass percent cadmium	Cd
More than 0.004 mass percent lead	Pb

Batteries can be given back free of charge after use at the place of purchase.

According to the §11 of the battery law, final consumers are obligedly to give old batteries back to gathering points which attached to the common take back system or manufacturer-specific take back systems.

NOTICE: Damage
To prevent short circuitry in the collection boxes, insulate the poles of each battery with insulation tape or put each single battery into a plastic bag.

6 Technical Data

6.1 General

Touch Screen	
Type	Analog resistive, 4 wire technology
Activation force	15 g (Standard) With R8 HS60 silicon rubber
Durability	No damages or malfunctions after 3 million keystrokes as the following: Keystroke element: R8, HS40 silicon rubber Keystroke load: 150 g Keystroke frequency: 3 Hz

Ethernet	
X5 Ethernet	10/100Base-T

Serial Interfaces	
Variable baud rates and data formats	
X6 RS422 / RS485	In accordance with DIN 66259-4 Transmission length: 0 - 1200 m, twisted pair wire, shielded, galvanically isolated
X6 RS232	In accordance with DIN 66259 T1, CCITT V.28 Transmission length: 0 - 15 m, conductors layered in strands, shielded, galvanically isolated

Field Bus Interfaces	
Variable baud rates and data formats	
X6 CAN	In accordance with ISO 11898 Galvanically Isolated
X6 DeviceNet	In accordance with ISO 11898 Galvanically isolated
X6 MPI	Galvanically isolated
X6 PROFIBUS-DP	Galvanically isolated
X6 KNX	Galvanically isolated
X6 / X7 INTERBUS	Galvanically not isolated / galvanically isolated

USB	
Corresponds to the „Universal serial bus specification Rev. 2.0“	
X9, X10 Host	Min.: 1.5 Mbit/s Max.: 12 Mbit/s Max. output current 100 mA per output

Central Processing Unit	
Central processing unit	RISC ARM9
Clock frequency	200 MHz
Other features	Watchdog timer, real-time clock, battery monitoring

Memory	
Application memory (option)	3 MByte (14 MByte)
Flash (option)	16 MByte (32 MByte)
SDRAM (option)	32 MByte (64 MByte)
SRAM (option)	512 KByte (512 KByte)

Connection System
D-SUB female and male connector strips, 9 pin and 25 pin
Female and male connector strips, Phoenix COMBICON / MINI COMBICON, 3 pin
Male connector strip, Phoenix COMBICON, 5 pin
RJ45 female connector
USB female connector A

Environmental Conditions	
Temperature during operation	0 °C to 50 °C (32 °F to 122 °F)
Temperature during storage, transport	- 25 °C to + 70 °C (-13°F to + 158°F)
Relative air humidity for operation and storage	20 % to 85 %, no condensation
Application area	Degree of pollution 2, overvoltage category III No direct solar radiation

Standards and Guidelines	
Interference immunity	DIN EN 61000-4-2 DIN EN 61000-4-3 DIN EN 61000-4-4 DIN EN 61000-4-5 DIN EN 61000-4-6 DIN EN 61000-6-2
Emitted interference	DIN EN 55011 limit value class A DIN EN 55022 limit value class A DIN EN 61000-6-4
Equipment requirements	DIN EN 61131-2
Storage and transportation	DIN EN 61131-2
Power supply	DIN EN 61131-2

Standards and Guidelines	
Electromagnetic compatibility	2004/108/EG
Degrees of protection	DIN EN 60529
Impact load, shocks	DIN EN 60068-2-27
Sinusoidal vibrations	DIN EN 60068-2-6

NOTICE: Radio Interference
This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate counter-measures, and to bear the cost of same.

Approvals
CE, UL, cUL

6.2 TP11AM

Display	
Type	FSTN (mono)
Resolution (pixels)	320 x 240
Colors	5 Shades of gray
Reading angle (vertical / horizontal)	80° / 80°
Contrast setting	Temperature compensated
Half-life backlighting	30,000 h
Brightness in cd/m^2	90
Display area (H x W) in mm (Inch)	57.6 x 76.8 (2.268 x 3.024)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.25 A
Power consumption (maximum)	0.35 A
Connected load	6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	96 x 130 x 5 (3.78 x 5.118 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	88 x 122 (3.465 x 4.803)
Mounting depth in mm (Inch)	About 33 (1.299) Standard / Field Bus Interface: About 45 (1.772)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 500 g

6.3 TP11AT

Display	
Type	TFT (color)
Resolution (pixels)	320 x 240
Colors	65536
Reading angle (vertical / horizontal)	140° / 140°
Half-life backlighting	30,000 h
Brightness in cd/m^2	320
Display area (H x W) in mm (Inch)	53.6 x 71.5 (2.11 x 2.815")

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.2 A
Power consumption (maximum)	0.3 A
Connected load	4.8 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	96 x 130 x 5 (3.78 x 5.118 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	88 x 122 (3.465 x 4.803)
Mounting depth in mm (Inch)	About 33 (1.299) Standard / Field Bus Interface: About 45 (1.772)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 500 g

6.4 TP21AM

Display	
Type	FSTN (mono)
Resolution (pixels)	320 x 240
Colors	5 Shades of gray
Reading angle (vertical / horizontal)	90° / 80°
Contrast setting	Temperature compensated
Half-life backlighting	40,000 h
Brightness in cd/m^2	120
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.25 A
Power consumption (maximum)	0.35 A
Connected load	6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	147 x 203 x 5 (5.787 x 7.992 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	139 x 195 (5.7472 x 7.677)
Mounting depth in mm (Inch)	About 54 (2.126) Standard / Field Bus Interface: About 66 (2.598)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1000 g

6.5 TP21AS

Display	
Type	C-STN (color)
Resolution (pixels)	320 x 240
Colors	256
Reading angle (vertical / horizontal)	60° / 100°
Contrast setting	Temperature compensated
Half-life backlighting	50,000 h
Brightness in cd/m^2	200
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.4 A
Power consumption (maximum)	0.5 A
Connected load	9.6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	147 x 203 x 5 (5.787 x 7.992 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	139 x 195 (5.7472 x 7.677)
Mounting depth in mm (Inch)	About 54 (2.126) Standard / Field Bus Interface: About 66 (2.598)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1000 g

6.6 TP21AT

Display	
Type	TFT (color)
Resolution (pixels)	320 x 240
Colors	65536
Reading angle (vertical / horizontal)	105° / 130°
Half-life backlighting	50,000 h
Brightness in cd/m^2	400
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.4 A
Power consumption (maximum)	0.6 A
Connected load	9.6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	147 x 203 x 5 (5.787 x 7.992 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	139 x 195 (5.7472 x 7.677)
Mounting depth in mm (Inch)	About 54 (2.126) Standard / Field Bus Interface: About 66 (2.598)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1000 g

6.7 TP35AM

Display	
Type	TFT (mono)
Resolution (pixels)	320 x 240
Colors	256 Shades of gray
Reading angle (vertical / horizontal)	150° / 130°
Half-life backlighting	40,000 h
Brightness in cd/m^2	220
Display area (H x W) in mm (Inch)	52.5 x 70 (2.066 x 2.755)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.3 A
Power consumption (maximum)	0.4 A
Connected load	7.2 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	90 x 120 x 5 (3.543 x 4.724 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	82 x 112 (3.228 x 4.409)
Mounting depth in mm (Inch)	About 35 (1.377) Standard / Field Bus Interface: About 47 (1.85)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 430 g

6.8 TP35AT

Display	
Type	TFT (color)
Resolution (pixels)	320 x 240
Colors	65536
Reading angle (vertical / horizontal)	150° / 130°
Backlight	LED
Half-life backlighting	40,000 h
Brightness in cd/m^2	350
Display area (H x W) in mm (Inch)	52.5 x 70 (2.066 x 2.755)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.3 A
Power consumption (maximum)	0.4 A
Connected load	7.2 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	90 x 120 x 5 (3.543 x 4.724 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	82 x 112 (3.228 x 4.409)
Mounting depth in mm (Inch)	About 35 (1.377) Standard / Field Bus Interface: About 47 (1.85)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 430 g

6.9 TP43AT

Display	
Type	TFT (color)
Resolution (pixels)	480 x 272
Colors	65536
Reading angle (vertical / horizontal)	120° / 150°
Half-life backlighting	40,000 h
Brightness in cd/m^2	450
Display area (H x W) in mm (Inch)	53.8 x 95 (2.118 x 3.74)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.3 A
Power consumption (maximum)	0.4 A
Connected load	7.2 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	100 x 140 x 5 (3.937 x 5.511 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	92 x 132 (3.622 x 5.196)
Einbautiefe	About 42 (1.654) Standard / Field Bus Interface: About 54 (2.126)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 590 g

6.10 TP57AM

Display	
Type	TFT (mono)
Resolution (pixels)	320 x 240
Colors	256 Shades of gray
Reading angle (vertical / horizontal)	135° / 150°
Half-life backlighting	40,000 h
Brightness in cd/m^2	250
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.4 A
Power consumption (maximum)	0.6 A
Connected load	9.6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	126 x 168 x 5 (4.961 x 6.614 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	118 x 160 (4.646 x 6.299)
Einbautiefe	About 42 (1.654) Standard / Field Bus Interface: About 54 (2.126)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 690 g

6.11 TP57AT

Display	
Type	TFT (color)
Resolution (pixels)	320 x 240
Colors	65536
Reading angle (vertical / horizontal)	135° / 150°
Backlight	LED
Half-life backlighting	40,000 h
Brightness in cd/m^2	400
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.4 A
Power consumption (maximum)	0.6 A
Connected load	9.6 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	126 x 168 x 5 (4.961 x 6.614 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	118 x 160 (4.646 x 6.299)
Mounting depth in mm (Inch)	About 42 (1.654) Standard / Field Bus Interface: About 54 (2.126)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 690 g

6.12 TP070ATW

Display	
Size (diagonal) in cm (inch)	17.78 (7)
Type	TFT (color)
Resolution (pixels)	800 x 480
Colors	65536
Reading angle (vertical / horizontal)	130° / 140°
Backlight	LED
Half-life backlighting	40,000 h
Brightness in cd/m^2	350
Display area (H x W) in mm (Inch)	91.4 x 152.4 (3.598 x 6.0)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.5 A
Power consumption (maximum)	0.7 A
Connected load	12 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	147 x 203 x 5 (5.787 x 7.992 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	139 x 195 (5.7472 x 7.677)

Front Panel and Enclosure	
Mounting depth in mm (Inch)	About 42 (1.654) Standard / Field Bus Interface: About 54 (2.126)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1000 g

6.13 TP090ATW

Display	
Size (diagonal) in cm (inch)	22.86 (9)
Type	TFT (color)
Resolution (pixels)	800 x 480
Colors	65536
Reading angle (vertical / horizontal)	170° / 170°
Backlight	LED
Half-life backlighting	70.000 h
Brightness in cd/m^2	400
Display area (H x W) in mm (Inch)	118 x 197 (4.645 x 7.755)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.6 A
Power consumption (maximum)	0.8 A
Connected load	14.4 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	172 x 260 x 5 (6.772 x 10.236 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	164 x 252 (6.456 x 9.921)
Mounting depth in mm (Inch)	About 54 (2.126) Standard / Field Bus Interface: About 66 (2.598)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1300 g

6.14 TP104AT

Display	
Type	TFT (color)
Resolution (pixels)	640 x 480
Colors	65536
Reading angle (vertical / horizontal)	110° / 140°
Half-life backlighting	50,000 h
Brightness in cd/m^2	350
Display area (H x W) in mm (Inch)	158 x 211 (6.22 x 8.307)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.6 A
Power consumption (maximum)	0.8 A
Connected load	14.4 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	249 x 328 x 5 (9.803 x 12.913 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	222 x 303 (8.740 x 11.929)
Mounting depth in mm (Inch)	About 55 (2.165) Standard / Field Bus Interface: About 67 (2.638)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 2300 g

6.15 TP105AT

Display	
Type	TFT (color)
Resolution (pixels)	800 x 600
Colors	65536
Reading angle (vertical / horizontal)	110° / 140°
Backlight	CCFL
Half-life backlighting	50,000 h
Brightness in cd/m^2	330
Display area (H x W) in mm (Inch)	158 x 211 (6.22 x 8.307)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.6 A
Power consumption (maximum)	0.8 A
Connected load	14.4 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	220 x 295 x 5 (8.661 x 11.614 x 0.196)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	212 x 287 (8.346 x 11.299)
Mounting depth in mm (Inch)	About 55 (2.165) Standard / Field Bus Interface: About 67 (2.638)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1800 g

6.16 TP120AT

Display	
Type	TFT (color)
Resolution (pixels)	800 x 480
Colors	65536
Reading angle (vertical / horizontal)	130° / 130°
Half-life backlighting	50,000 h
Brightness in cd/m^2	280
Display area (H x W) in mm (Inch)	262 x 157 (10.315 x 6.181)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	0.7 A
Power consumption (maximum)	0.9 A
Connected load	16.8 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	225 x 330 x 5 (8.858 x 12.992 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	217 x 322 (8.543 x 12.677)
Mounting depth in mm (Inch)	About 54 (2.126) Standard / Field Bus Interface: About 66 (2.598)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 1900 g

6.17 TP151AT

Display	
Type	TFT (color)
Resolution (pixels)	1024 x 768
Colors	256
Reading angle (vertical / horizontal)	135° / 160°
Backlight	CCFL
Half-life backlighting	50,000 h
Brightness in cd/m^2	480
Display area (H x W) in mm (Inch)	228 x 304 (8.976 x 11.969)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Minimum voltage	18 V
Maximum voltage	30 V
Power consumption (typical at 24 V)	1.0 A
Power consumption (maximum)	1.2 A
Connected load	24 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	329 x 400 x 5 (12.953 x 15.748 x 0.197)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	303 x 374 (11.929 x 14.724)
Mounting depth in mm (Inch)	About 60 (2.362) Standard / Field Bus Interface: About 72 (2.835)
Degree of protection	Front: IP65 Rear: IP20
Total weight	About 2300 g

7 Ordering Data

Table 7-1 Accessories

Description	Part No.
USB 2.0 stick 1 GB	81152.100
Battery, assembled with cable and connector (Type: CR2450)	66779.000
Protective foil for touch screen 3,5" (Set with 10 protective foils, scraper and instructions)	81251.035
Protective foil for touch screen 3,8" (Set with 10 protective foils, scraper and instructions)	81251.038
Protective foil for touch screen 5,7" (Set with 10 protective foils, scraper and instructions)	81251.057
Protective foil for touch screen 7" (Set with 10 protective foils, scraper and instructions)	81251.070
Protective foil for touch screen 9" (Set with 10 protective foils, scraper and instructions)	81251.090
Protective foil for touch screen 10,4" (Set with 10 protective foils, scraper and instructions)	81251.104
Protective foil for touch screen 12" (Set with 10 protective foils, scraper and instructions)	81251.120
Protective foil for touch screen 15" (Set with 10 protective foils, scraper and instructions)	81251.150
DeviceNet connector with cover cap	57353.005 57357.005
PROFIBUS-DP connector for bus end, straight cable outlet	57330.000
PROFIBUS-DP connector, angular cable outlet with screw connection	57234.000
PROFIBUS-DP connector, angular cable outlet with spring force connection	57234.100

A Index

A

Accessories....103
Administration operating mode....54

B

Battery....81
Battery disposal....82

C

Cable
- CAN....68
- DeviceNet....71
- Ethernet....60
- INTERBUS....73
- MPI....75
- PROFIBUS....77
- USB....61

Changing the battery....82
Connecting....41

D

Device variants....59
Diagnostics
- CAN....69
- DeviceNet....71
- Ethernet....61
- INTERBUS....73
- MPI....75
- PROFIBUS-DP....77

Dimensions
- Cutout....19
- Front panel....10

Display....57

F

Front Panel Dimensions
- TP070ATW....13
- TP090ATW....14
- TP104AT....15
- TP105AT....16
- TP11AM, TP11AT....10
- TP120AT....17
- TP151AT....18
- TP21AM, TP21AS, TP21AT....10
- TP35AM,TP35AT....11
- TP43AT....11
- TP57AM, TP57AT....12

Fuse....81

I

Identification....56
Intended use....8
Interface
- CAN Slave....66
- DeviceNet slave....70
- Ethernet....60
- INTERBUS Slave....72
- KNX....78
- MPI Slave....74
- PROFIBUS slave....76
- RS232....65
- RS422....63
- RS485....63
- USB....61

L

Launch structure....44
Loading procedure on windows CE operating system....43

M

Maintenance....81
Mounting....9
Mounting Cutout
- TP070ATW....24
- TP090ATW....25
- TP104AT....26
- TP105AT....27
- TP11AM, TP11AT....19
- TP120AT....28
- TP151AT....29
- TP21AM, TP21AS, TP21AT....20
- TP35AM, TP35AT....21
- TP43AT....22
- TP57AM, TP57AT....23

Mounting depth
- TP070ATW....35
- TP090ATW....36
- TP104AT....37
- TP105AT....38
- TP11AM, TP11AT....30
- TP120AT....39
- TP151AT....40
- TP21AM, TP21AS, TP21AT....31
- TP35AM, TP35AT....32
- TP43AT....33
- TP57AM, TP57AT....34

N

Nameplate....56
Normal mode....45

O

Ordering data....103

P

Pin assignment
- CAN....67
- DeviceNet....70
- Ethernet....60
- INTERBUS....72
- KNX....78

SÜTRON

MPI ... 74
PROFIBUS ... 76
RS232 ... 65
RS422 ... 63
RS485 ... 63

R

Rear view
CAN Slave ... 66
DeviceNet slave ... 70
Ethernet ... 60
INTERBUS ... 72
KNX ... 78
MPI slave ... 74
PROFIBUS-DP Slave ... 76
RS422 / RS485 / RS232 ... 62

S

Safety notes ... 7
Servicing ... 81
Setup Main operating mode ... 45
Side view
TP070ATW ... 35
TP090ATW ... 36
TP104AT ... 37
TP105AT ... 38
TP11AM, TP11AT ... 30
TP120AT ... 39
TP151AT ... 40
TP21AM, TP21AS, TP21AT ... 31
TP35AM, TP35AT ... 32
TP43AT ... 33
TP57AM, TP57AT ... 34
Standards ... 84
Supply Voltage ... 41
Switching on ... 43

T

Target group ... 8
Technical data ... 83
TP070ATW ... 96
TP090ATW ... 97
TP104AT ... 99
TP105AT ... 100
TP11AM ... 86
TP11AT ... 87
TP120AT ... 101
TP151AT ... 102
TP21AM ... 88
TP21AS ... 89
TP21AT ... 90
TP35AM ... 91
TP35AT ... 92
TP43AT ... 93
TP57AM ... 94
TP57AT ... 95
Termination
CAN ... 68
DeviceNet ... 71
MPI ... 75
PROFIBUS ... 77
RS232 ... 65
RS485 ... 64
Touch screen ... 57

U

Unpacking ... 9

V

Version key ... 56

SÜTRON electronic GmbH
Kurze Straße 29
D-70794 Filderstadt
Phone: 0049 711 / 77098-0
Fax: 0049 711 / 77098-305
E-Mail: doku@suetron.de
Internet:www.suetron.com